
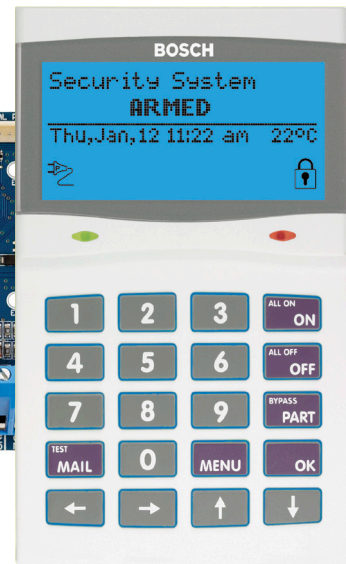


Solution 6000

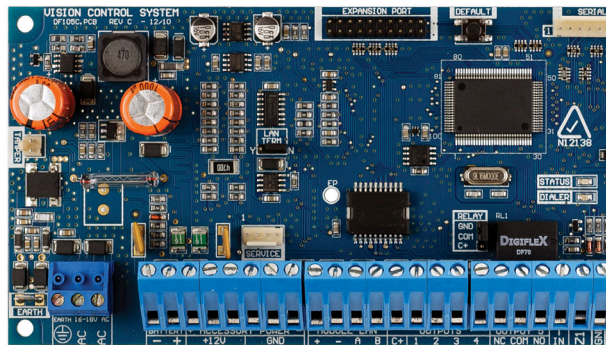

Security Systems

EN

Quick Start Guide
Security System

BOSCH

Copyright Notice

Unless otherwise indicated, this publication is the copyright of Bosch Security Systems Pty Ltd ("Bosch"). All rights are reserved. You may download a single copy of this publication. By downloading the publication you agree that you will: (i) only use the publication for your own reference; (ii) not commercially exploit or charge any person for the use of the publication; and (iii) not modify the publication in any way without the prior written permission of Bosch. Except as specified above or where authorised by the Copyright Act 1968 (Cth), no part of this publication may be reproduced, transmitted, modified or stored in any form or by any means, without the prior written permission of Bosch.

Trademarks

Throughout this document trademark names may have been used. Rather than put a trademark symbol in every occurrence of a trademark name, we state that we are using the names only in an editorial fashion and to the benefit of the trademark owner with no intention of infringement of the trademark.

Notice of Liability

While every effort has been taken to insure the accuracy of this document, neither Bosch Security Systems Pty Ltd nor any of its official representatives shall have any liability to any person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by the information contained in this book. Should you find any error or inconsistency, please notify us accordingly.

Bosch Security Systems Pty Ltd reserves the right to make changes to features and specifications at any time without prior notification in the interest of ongoing product development and improvement.

Telepermit Note

The grant of a Telepermit for a device in no way indicates Telecom acceptance of responsibility for the correct operation of that device under all operating conditions.

This equipment shall not be used in any manner that could constitute a nuisance to other Telecom customers.

Immediately disconnect this equipment should it become physically damaged, and arrange for its disposal or repair.


The transmit level from this device is set as a fixed level and because of this there may be circumstances where the performance is less than optimal. Before reporting such occurrences as faults, please check the line with a standard telepermitted telephone.

Warnings

1. This product must be installed by a qualified and licensed security installer.
2. This product may not perform as expected if installed incorrectly.
3. Some features of this product, including but not limited to Back to Base reporting, SMS and Email Reporting and Automatic Time and Date Adjustments require a working telephone line to operate and telephone communication service provider charges are applicable.
4. Australian standard AS 2201 requires regular service by qualified and licensed security persons and regular user testing. Please consult your security alarm company for further details.
5. Incorrect programming of parameters can result in operation contrary to what may be desired.
6. Leave the mains adapter plugged in at all times.
7. Leave the telephone line plugged in at all times under normal conditions.
8. The Product Identification Label for this product which is supplied in the resistor pack, must be affixed to the outside of the enclosure during installation.



BOSCH

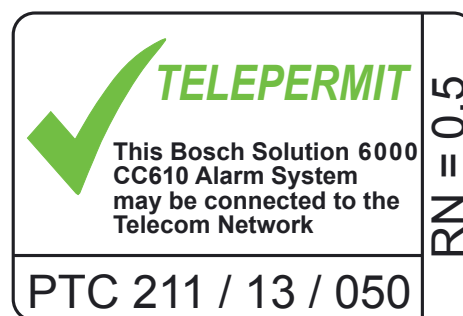

9. This equipment shall not be set up to make automatic calls to the Telecom '111' Emergency Service.

TABLE OF CONTENTS

FEATURES	4
OVERVIEW	4
ABOUT THE PANEL.....	5
Enclosures	5
Enclosure Fixing Method	5
Installing The Tamper Switch	5
Enclosure Module Spaces.....	5
Installing Panels and Modules	6
Connecting Power To The Panel.....	8
Connecting The Battery	8
AC Mains Transformer Option.....	8
Panel LED Indicators.....	8
WIRING DIAGRAMS.....	9
EOL Resistor Colours and Values	9
LAN Overview	10
LAN Wiring	10
System Earthing.....	11
Terminating the LAN	11
PCB Layout	12
Connection Diagram.....	13
Terminal Descriptions	14
Board Connectors.....	14
ABOUT THE KEYPAD	15
Status Icons / LED's.....	16
Keypad Tones	16
Keypad & Readers Setup.....	17
DIP Switch Address Select	17
Rotary Switch Address Select.....	17
DTMF Control Functions	18
Programming Overview.....	18
Entering Programming Mode.....	18
Exiting Programming Mode	18
Navigating The Menu.....	18
Command Menu	19
Programming Option Bit Menus.....	19
Alpha Text.....	19
Telephone Numbers.....	19
List Options.....	19
Clock Programming	20
GETTING STARTED BACK TO BASE.....	20
SERVICE MODE.....	20
DEFAULTING THE SYSTEM.....	20
DOMESTIC TEMPLATE DEFAULTS.....	21
DIRECT LINK PROGRAMMING	21
ZONE ARRAY	21
DOOR ARRAY	21
OUTPUT ARRAY	22
BASIC REPORTING REFERENCE	22
MENU REFERENCE TABLE.....	23
PROGRAM LOCATIONS	26
Access Programming	26
User Default Table	26
Area Programming.....	28
Input Programming	30
Zone Assignments	31
Zone Default Table	32
Output Programming	34
Output Default Table.....	34
Output Event Types	35
Output Assignments	36
One Shot Mode	36

Pulsing Mode	36
Comms Programming	37
Device Programming	44
Testing The System	51
Installation Details.....	52
Specifications.....	53

FIGURES

Figure 1: PCB and Mounting Clip Installation Diagram	5
Figure 2: Tamper Bracket Installation.....	5
Figure 3: MW720B - Small Enclosure Details	6
Figure 4: PCB Mounting Clip	6
Figure 5: MW720B Configuration Examples	6
Figure 6: MW730B - Large Enclosure Details	7
Figure 7: MW730B Configuration Examples	7
Figure 8: Internal Transformer Connection Diagram.....	8
Figure 9: N/C No EOL Zone	9
Figure 10: N/C Single EOL Zone	9
Figure 11: N/C Split EOL Zone.....	9
Figure 12: N/C Zone With Tamper.....	9
Figure 13: N/O No EOL Zone	9
Figure 14: N/O Single EOL Zone.....	9
Figure 15: N/O Split EOL Zone	9
Figure 16: N/O Zone With Tamper	9
Figure 17: EOL Resistor Colour Chart	9
Figure 18: LAN Connection Using 2 Pair Security Cable.....	10
Figure 19: LAN Connection Using Twisted Pair Cable	11
Figure 20: Solution 6000 Board Layout	12
Figure 21: Solution 6000 Connection Diagram	13
Figure 22: Keypad Emergency Alarm Trigger's	15
Figure 23: Keypad DIP Switch Address Settings.....	17
Figure 24: Rotary Switch Address Settings	17
Figure 25: Sample Option Bit Menu Display.....	19
Figure 26: Area Text Programming Display	19
Figure 27: Telephone Number Programming Display	19
Figure 28: List Option Programming Display	20
Figure 29: Clock Programming Display	20

TABLES

Table 1: Expansion Options	5
Table 2: Dialler Indicator LED	8
Table 3: Status Indicator LED	8
Table 4: Terminal Block Descriptions.....	14
Table 5: Board Connector Descriptions	14
Table 6: Keypad Key Functions	15
Table 7: ICON & LED Indicator Meanings	16
Table 8: Keypad Tones.....	16
Table 9: DIP Switch Address Settings	17
Table 10: Rotary Switch Address Settings.....	17
Table 11: DTMF Remote Control Functions.....	18
Table 12: Keys Used During Programming.....	19
Table 13: Text Keypad Character Set	19
Table 14: Phone Number Character Set	19
Table 15: Domestic Default Settings	21
Table 16: Shortform Point ID Listing	22
Table 17: Menu Structure And Layout	25
Table 18: User Default Programming Options.....	26
Table 19: Zone Assignments.....	31
Table 20: Zone Defaults.....	32
Table 21: Output Default Table.....	34
Table 22: Output Event Types	35
Table 23: Address Configuration and Output Assignments	36
Table 24: One-Shot Polarity Example	36

Features

Listed below are the main features of the Solution 6000 Control Panel.

- ◆ Individual Box Tamper Circuit Monitoring
- ◆ Report Via Email (Internet)
- ◆ Telephone Line Busy Tone Detect
- ◆ RAS Intelli-Connect® CLI Caller Line Identification
- ◆ Daylight Savings
- ◆ Senior Watch
- ◆ GSM/GPRS/Ethernet Reporting Options
- ◆ System Maintenance Interval Reminder
- ◆ System Weekly Test Reminder
- ◆ Area Inactivity Interval
- ◆ Up to 16 Access Doors
- ◆ Temporary PIN
- ◆ Dual Reporting
- ◆ Dual Redundant Reporting
- ◆ Alarm Report Abort/Cancel Options
- ◆ 8 Programmable Holiday Calendars
- ◆ 16 Programmable TimeZones
- ◆ 8 On-board Zones (Single EOL) / 16 On-Board Zones (Dual EOL)
- ◆ Expandable To 144 Zones)
- ◆ Fire Alarm Verification
- ◆ 255 PIN Users
- ◆ 4 Supervised High Power Digital Outputs
- ◆ 1 Relay 2 Amp Form (C) Contact (Expandable to 32)
- ◆ Supervised Siren Driver
- ◆ Partitionable To 8 Areas
- ◆ Dialler Reports SIA, Contact ID, SMS and Email Formats
- ◆ Supervised LAN Keypads (Maximum 16 Keypads)
- ◆ Keyswitch Input
- ◆ 1000 History Event Memory
- ◆ EMI / Lightning Transient Protection
- ◆ Fully Menu Text Programmable
- ◆ Programmable Via Solution Link Software (Remote/Direct)
- ◆ Telephone Line Fail Monitor
- ◆ TimeZone Executed Functions
- ◆ 60+ Output Event Types
- ◆ Exit Restart
- ◆ Expansion Module Supervision
- ◆ DTMF Tone Decoder Built In
- ◆ Remote Arming
- ◆ Fingerprint Reader Options

Overview

Zones

The Solution 6000 control panel provides up to 144 separate zones of protection. Zone programming determines the panel's response to open/short and tamper conditions on the zone loop.

Areas

The control panel supports up to 8 separate areas. You can assign all zones to a single area, or you can assign each zone to a combination of different areas.

You can arm and disarm the control panel by area, alternatively, you can arm and disarm several areas at the same time.

Dialler

The control panel has a built-in dialler to send reports to the receiving party (ie. Security company monitoring station, mobile phone etc).

Keypads

You can connect a maximum of 16 fully supervised keypads to the control panel. The available current affects the total number of keypads that you can connect without the need to provide additional power supplies.

History Log

The control panel can store up to 1000 history events from all 8 areas. All events are stored in the log, even if they are programmed not to report via the on-board dialler.

You can view the control panel's history log via keypad, or by connection of a personal computer (direct/remote) using the SolutionLink upload/download software.

Programming

You can program the Solution 6000 either by a keypad or using a personal computer using the Solution Link upload/download software.

About The Panel

Enclosures

The MW720B - Small Enclosure and MW730B - Large Enclosure have been designed to reduce installation time and improve aesthetics on larger installations where often multiple enclosures need to be located in close proximity to each other.

A number of new features have been incorporated including a new style tamper bracket which can be easily installed before or after the enclosure is mounted to the wall, an anti tamper lid which insures the cabinet tamper triggers when the lid is removed, easier access for flexible and rigid conduits, additional 20mm cable entry knockouts and a new board mounting system using removable spring clips.

The MW720B and MW730B enclosures include numerous holes, allowing the PCB mounting clips to be positioned in the most appropriate location for each installation.



For ease, it is recommended that the PCB mounting clips are installed from the rear of the enclosure before mounting it to the wall.

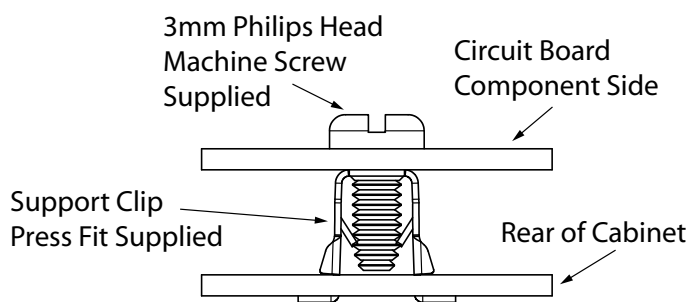


Figure 1: PCB and Mounting Clip Installation Diagram

Enclosure Fixing Method

CM720B - Small Enclosure

Use appropriate fasteners capable of handling a minimum of 6kg to fix the cabinet against a sturdy surface using the mounting holes provided.

CM730B - Large Cabinet

Use appropriate fasteners capable of handling a minimum of 12kg to fix the cabinet against a sturdy surface using the mounting holes provided.

Installing The Tamper Switch

The tamper switch can be located on either the left or right hand side of the cabinet to suit the installation. Before installing the bracket, fit the tamper lead to the switch and then insert it into the bracket.

Once the enclosure has been mounted to the wall, insert the tamper bracket into the rectangular hole in the top

flange of the enclosure and then slide the base of the bracket toward the top until the tamper switch locates in the rear of the enclosure.

Depress the tamper a few times with your finger to ensure smooth operation.



Figure 2: Tamper Bracket Installation

Enclosure Module Spaces

The MW720B enclosure has space for 2 large modules or 4 small modules while the optional MW730B enclosure has space for up to 4 large modules or 8 small ones. The enclosures have been designed so that any combination of large and small units can be neatly mounted together on the wall.

Each module is mounted to the enclosure using 4 or more clip in standoffs. The clips can be inserted from the rear of the enclosure before mounting it to the wall, or from the front of the enclosure after it has been mounted. Both methods should be performed using your finger tips to prevent damage to the standoff. (Standoffs and screws are supplied with each module).

All compatible add on modules will mount on these spaces. See below for list if modules which can be added to the control panel.

Module	Space Occupied
Solution 6000 Control Panel	2 Module Spaces
CM704B Zone Expander	1 Module Space
CM705B Universal Expander	2 Module Spaces
CM710B Output Expander	1 Module Space
CM720B LAN Power Supply	1 Module Space
CM760B Real Time Clock	1 Module Space
CM797B LAN Isolator Module	1 Module Space
CM195 RF Receiver Expander	1 Module Space

Table 1: Expansion Options

Use the above table to help determine which size cabinet you will require for the job.


On some export models, one module space will not be available as the mains transformer mounts in this location.

Installing Panels and Modules

Once the enclosure is secured in place, install the panels and modules onto the mounting clip using the supplied 3mm screws. Do not over tighten the screws.

When fitting panels or large modules, you should use 5 mounting clips, one in each corner of the PCB and one in the middle of the PCB underneath the main terminal blocks. When mounting small modules, only 4 clips are required, 1 in each corner.

Both enclosures are supplied with tamper switches, tamper leads, tamper brackets and a quantity of mounting clips and screws. If required, additional mounting clips and screws may be purchased in bags of 50 clips (10 packs x 5pcs). (P/N: MW890)



The supplied mounting clips are designed to use the 3mm machine screws supplied with the enclosure. The use of self tapping screws will damage the clips.

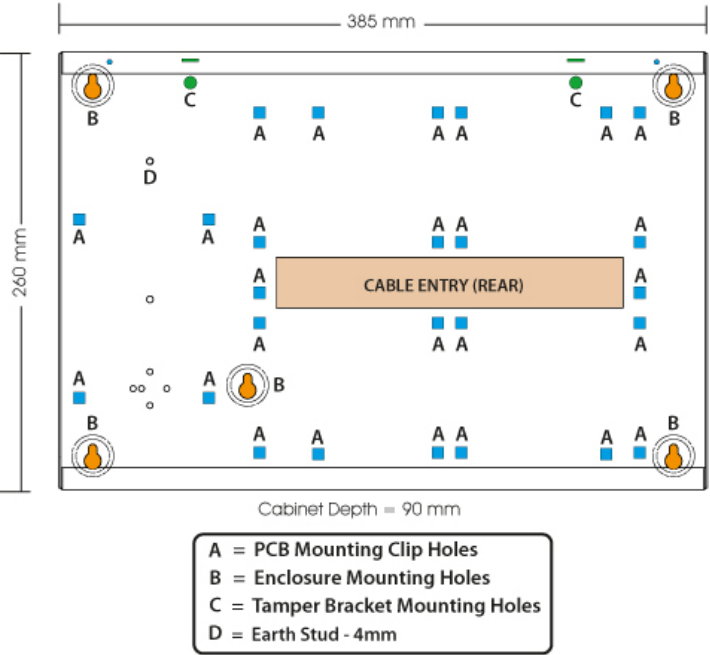


Figure 3: MW720B - Small Enclosure Details

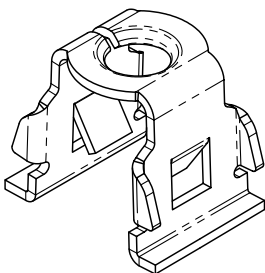


Figure 4: PCB Mounting Clip

The following example shows the MW720B - Small enclosure configured using 4 small modules.

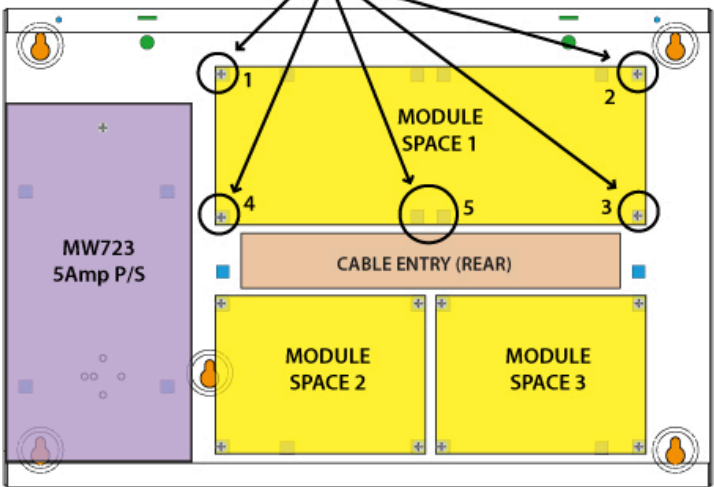
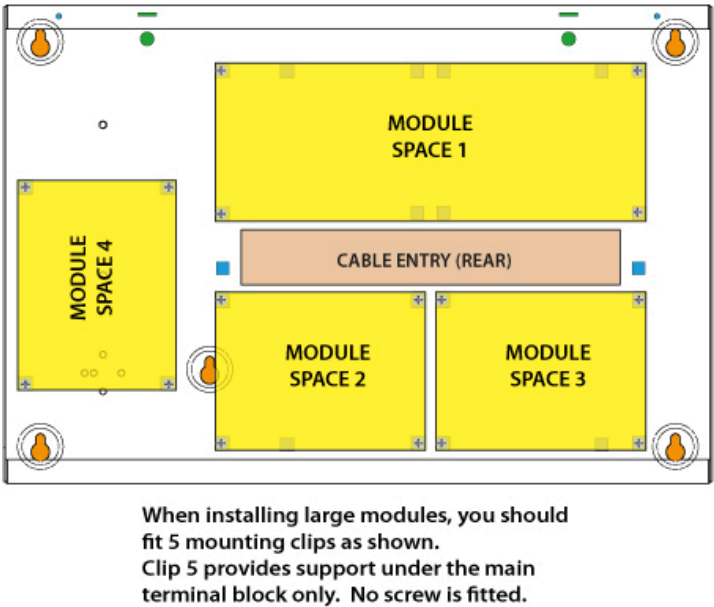
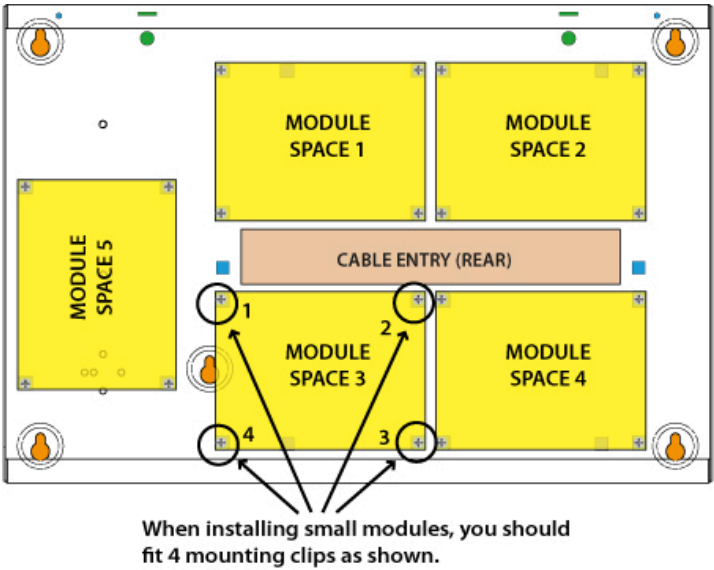


Figure 5: MW720B Configuration Examples


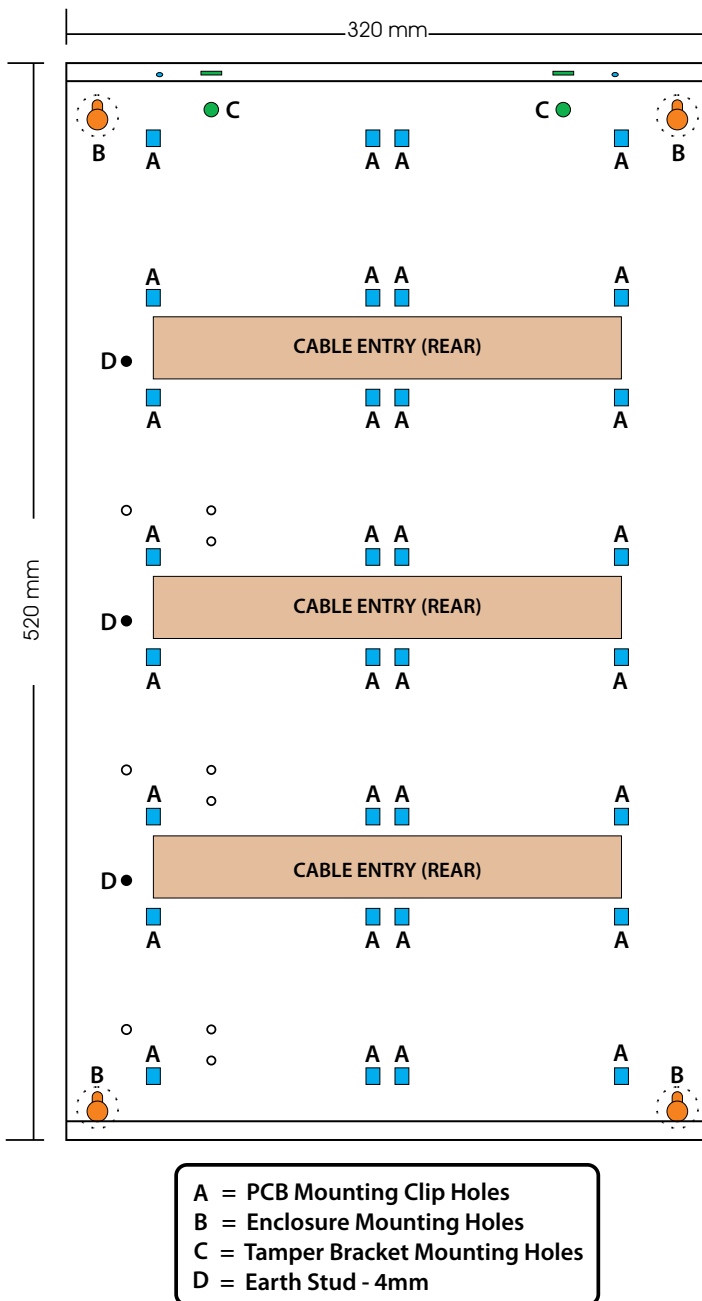


Figure 6: MW730B - Large Enclosure Details

The following examples show the MW710 -Large enclosure configured using 6 small modules and 1 large module.

When installing large modules you should fit 5 mounting clips as shown. Clip 5 provides support under the main terminal block only. No screw is fitted.

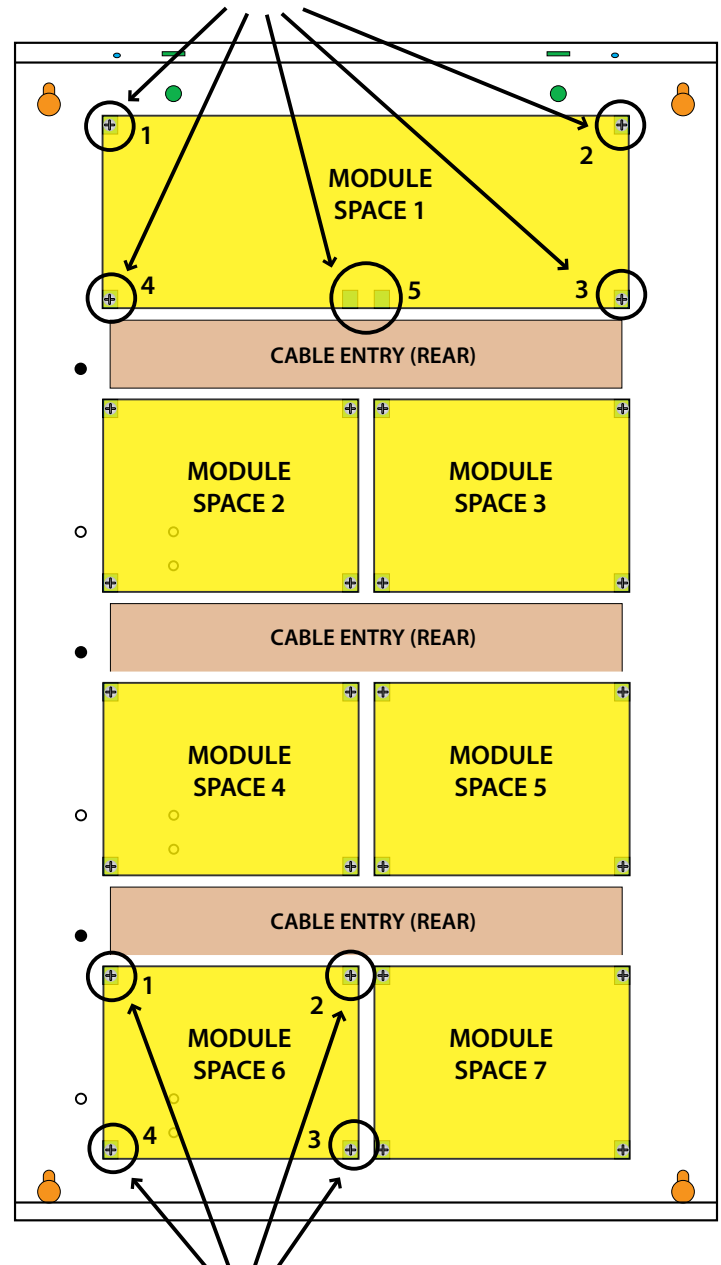

When installing small modules, you should fit 4 mounting clips as shown.

Figure 7: MW730B Configuration Examples

Connecting Power To The Panel

For normal operation, the panel requires both AC and DC power sources. The AC source can be provided either by an external adapter or by an internal transformer depending on the model and country of sale.

When connecting using the AC adapter, feed the cable in to the enclosure and terminate the wires on the removable terminal block supplied before connection it to the PCB.

If using a 3 wire adaptor, then the earth wire should also be terminated onto the terminal block. Always check the orientation of the terminal block with the PCB markings before connecting it to the PCB.

Connecting The Battery

The panel is supplied with a set of battery leads to suit the chosen enclosure. Connect the RED battery lead to the battery (+) terminal and the BLACK battery lead to the battery (-) terminal on the PCB.

Once terminated onto the PCB connect the other end of the leads to the battery paying attention to the polarity.

AC Mains Transformer Option

On models with an internal transformer, a permanent connection shall be made to the mains supply. See Figure 8. This must be completed by a suitably qualified electrician according to the applicable wiring standards and regulations.

Next connect the transformer output wires (red) to the removable terminal block supplied and then connect it to the PCB. Always check the orientation of the terminal block with the PCB markings before connecting.



For permanently connected equipment, a readily accessible disconnect device shall be installed in a location near to the equipment.

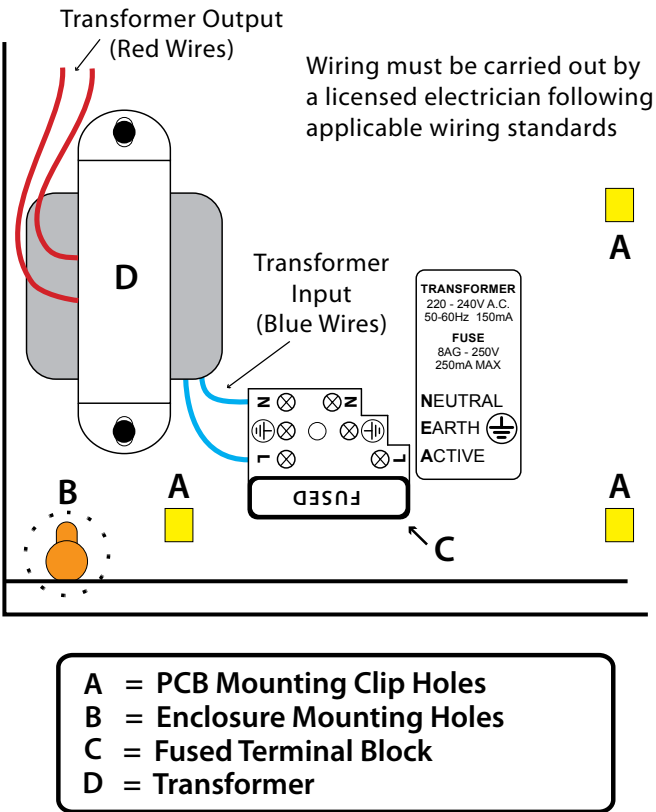


Figure 8: Internal Transformer Connection Diagram

Panel LED Indicators

The control panel PCB has two LED indicators (Dialler and Status LED's) which display the following information.

Condition	Meaning
Off	Offline
On	On Line (Dialling/Answered)
Flashing	Incoming Call

Table 2: Dialler Indicator LED

Condition	Meaning
Off	Error
On	Error
Flash Once Every 2 Seconds	OK
Flash Fast	AC or Battery Trouble

Table 3: Status Indicator LED



During factory defaulting the Status and Dialler LED indicators will flash alternatively for approximately 15 seconds.

Wiring Diagrams

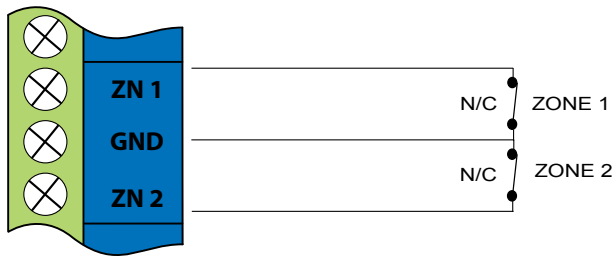


Figure 9: N/C No EOL Zone

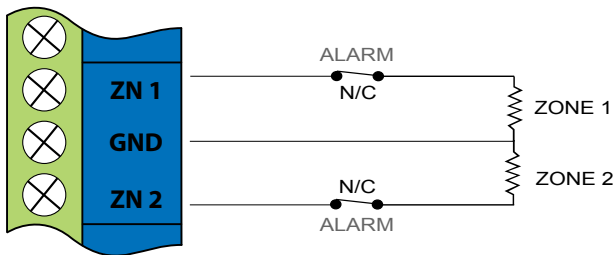


Figure 10: N/C Single EOL Zone

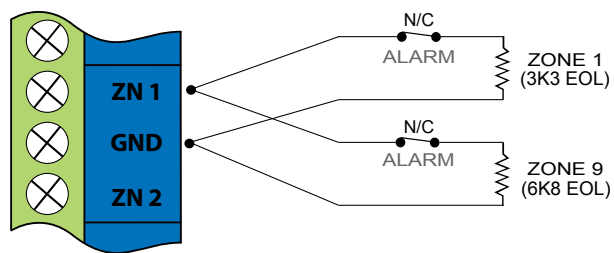


Figure 11: N/C Split EOL Zone

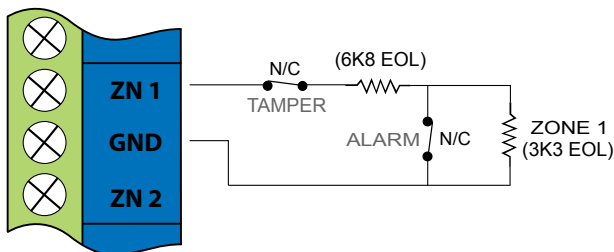


Figure 12: N/C Zone With Tamper



The above diagrams display zone configurations using Normally-Closed Alarm contacts and Normally-Open Alarm Contacts. When using Normally-Open Alarm Contacts you must select Inverted Seal for each zone in MENU 3-1-8. A shorted loop is a tamper condition for all EOL zone configurations.

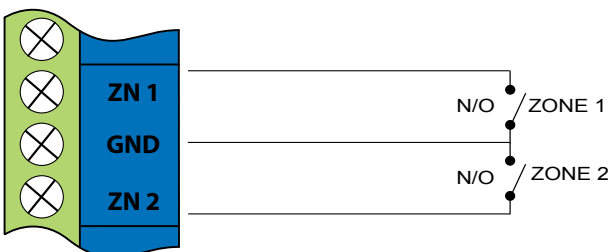


Figure 13: N/O No EOL Zone

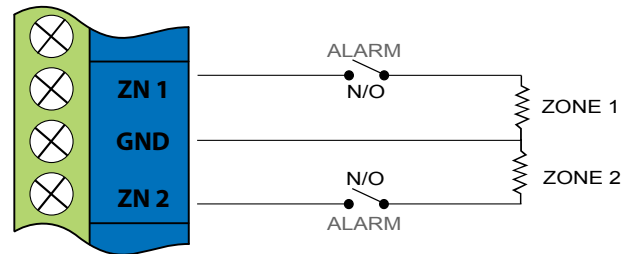


Figure 14: N/O Single EOL Zone

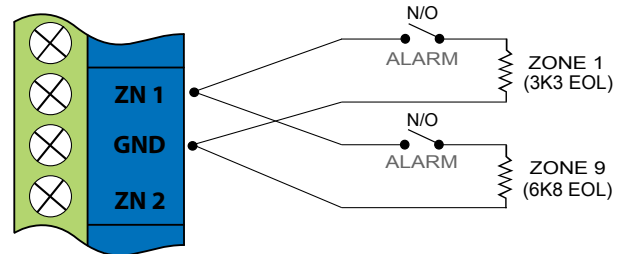


Figure 15: N/O Split EOL Zone

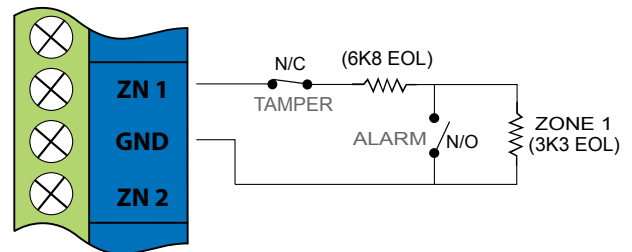


Figure 16: N/O Zone With Tamper

EOL Resistor Colours and Values

Use either the 4 colour, or solid colour resistors supplied.

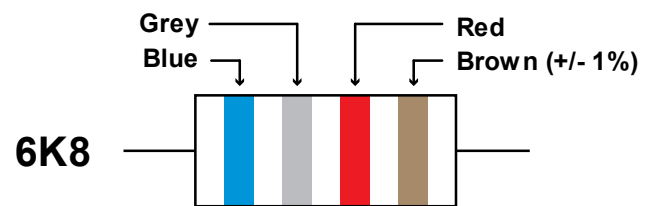
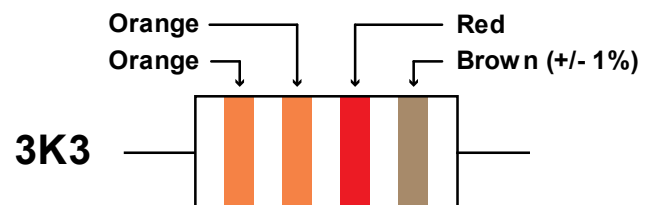


Figure 17: EOL Resistor Colour Chart

LAN Overview

The control panel communicates with other system module devices via the built in RS485 LAN or Local Area Network.

For increased security, the system uses anti-substitution technology and a proprietary data encryption algorithm to communicate with all LAN modules.

When using the recommended cable types the LAN can be up to 1200 metres in length, or even greater when LAN isolators are used.

See the CM797B LAN Isolation Module reference guide for more information on how to use LAN isolators to increase the overall LAN length, improve surge immunity protection and prevent earth loops.



It is recommended that one or more CM797B Isolators be used when connecting the LAN between multiple buildings.

LAN Wiring

Figure 18 and Figure 19 show the two recommended module connection diagrams.

The method shown in Figure 18, is only recommended for use where the total LAN length is 300 metres or less and the system is not installed in a electrically noisy environment. In this case it is possible to use 7/0.20 or 14/0.20 security cable (non twisted) provided that module voltage levels are maintained within specification.

The method shown in Figure 19, offers the greatest immunity to noise interference and voltage surges. This connection method is recommended where the total LAN length is greater than 300 metres. When using twisted pair cable the LAN length can be up to 1200 metres, and this can be extended even further when using LAN isolators.

The LAN can be wired using the daisy chain method as shown, where each module is wired back to the panel on the same cable run or using a star configuration, where individual modules are wired back to the panel on individual wires.

Un-shielded cable can be used successfully in many situations however for the highest reliability and performance in areas prone to frequent electrical storms or high levels of electrical interference, shielded twisted pair cable should be used.

LAN+ and LAN- should not be used to power detectors or other external devices. These devices should be powered from the +12V terminals on the panel or via an external power supply.

When wiring modules with built in power supplies like the control panel and the CM720B Power Supply, do NOT connect the EARTH wire from any 3 wire plug pack to the module's EARTH input terminal, if you have installed a separate communication earth wire.

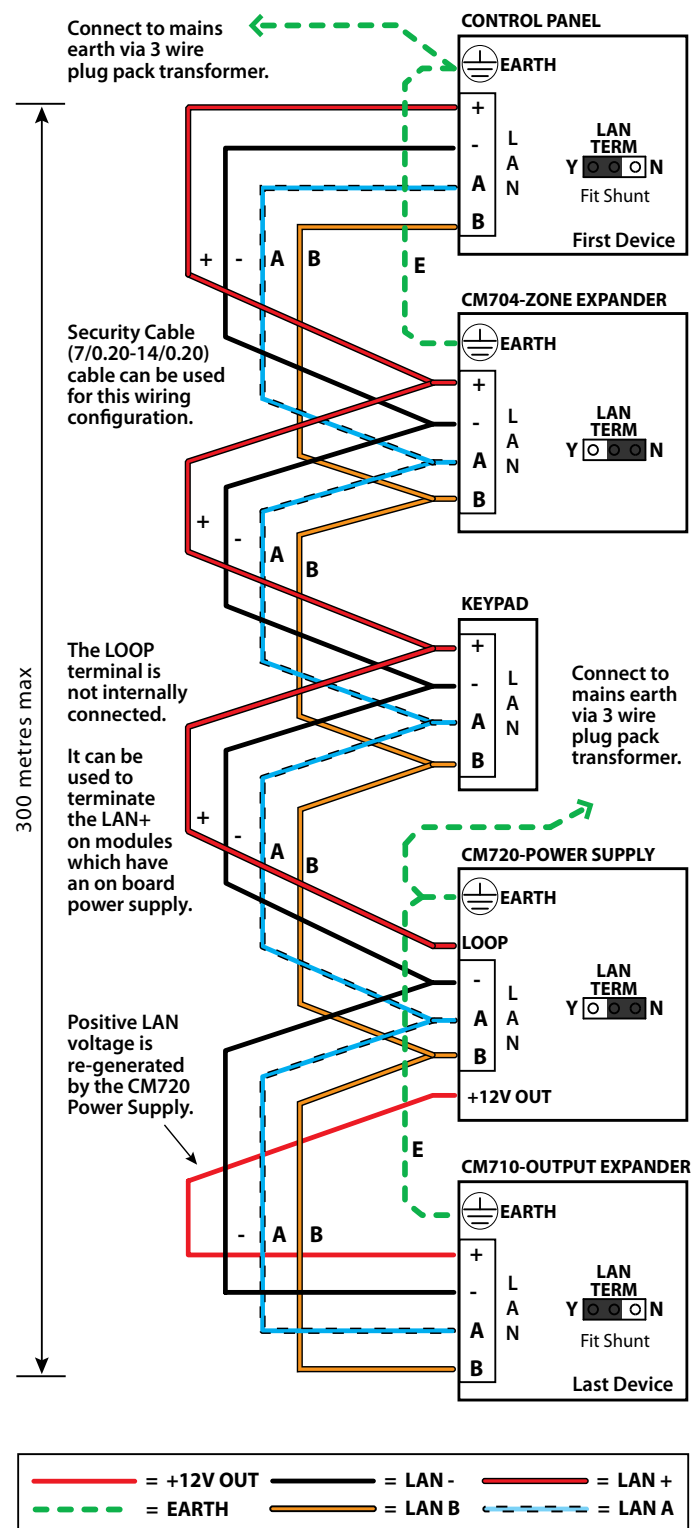


Figure 18: LAN Connection Using 2 Pair Security Cable

The LAN A and LAN B wires are not interchangeable. Make sure that the LAN A wires from all modules connect to LAN A on the panel and LAN B wires from all modules connect to LAN B on the panel.

Do not connect the positives of two power supply sources together. When wiring the LAN to modules that are self powered, or powered from an external source you should terminate the LAN+ into the terminal marked LOOP. This terminal is simply a termination point and is not internally connected.

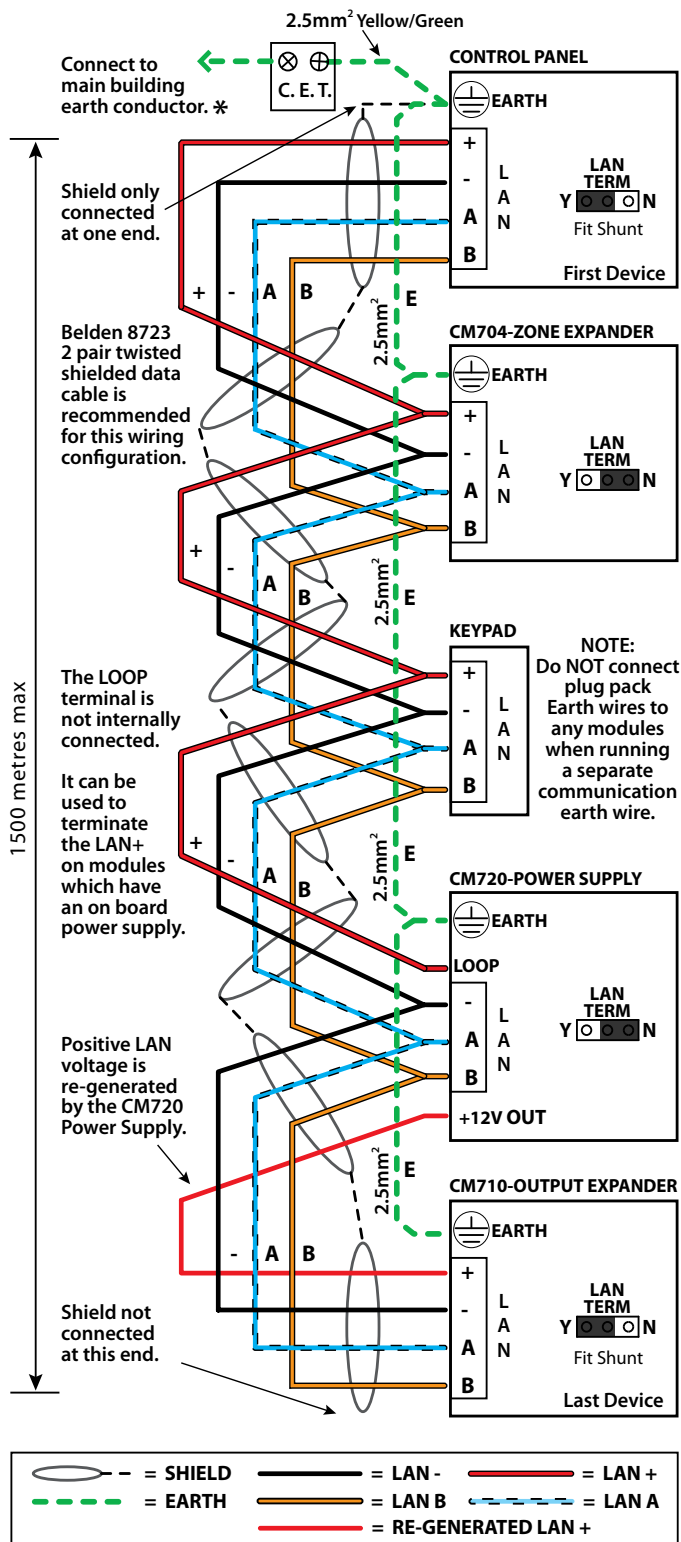


Figure 19: LAN Connection Using Twisted Pair Cable

The LAN- terminals from all modules must be connected together for correct operation.

System Earthing

When running a CET communications Earth as per Figure 19, the communication earth should be connected to the earth terminal on each module and then connected back through the CET to the main building earth conductor.

Do NOT connect the plug pack transformers earth wire to any modules earth terminal.



If a separate Communications Earth wire is installed, do NOT connect the EARTH wire from any 3 wire plug pack to any modules EARTH input terminal.

If a separate communications earth is NOT being used, then you should connect the earth wire from the 3 wire plug pack to the panels earth terminal as shown in Figure 19.

When using shielded cable, the shield of each length of cable should only be connected to a protective earth at one end. Do not allow the shield to make contact with negative 0 volts, ground or any other wiring within the system.

All earth wiring should be carried out in accordance with the local wiring regulations in your area.

Terminating the LAN

For reliable operation, the system LAN must be terminated correctly. The control panel and all LAN modules include a LAN TERM pin header and shunt which is used to connect the termination resistor on the module.

When the shunt is installed between the Y pin and the centre pin, the terminator is fitted and when the shunt is between the N pin and the centre pin the terminator is not fitted.

Where all modules are connected to the panel on a single cable run, (Daisy Chained) the terminators should be installed on the first and last modules on the LAN.

If the modules are connected to the panel via multiple cables all running back to the control panel (Star Configuration) then the terminators should be installed on the modules at the end of the two longest cable runs.

There are no LAN terminators on keypads. If a keypad is one of the two furthest devices from the control panel then a 470 ohm 1/2watt resistor can be fitted at the keypad between the LAN A and LAN B terminals.



The LAN must be terminated correctly for correct operation.

PCB Layout


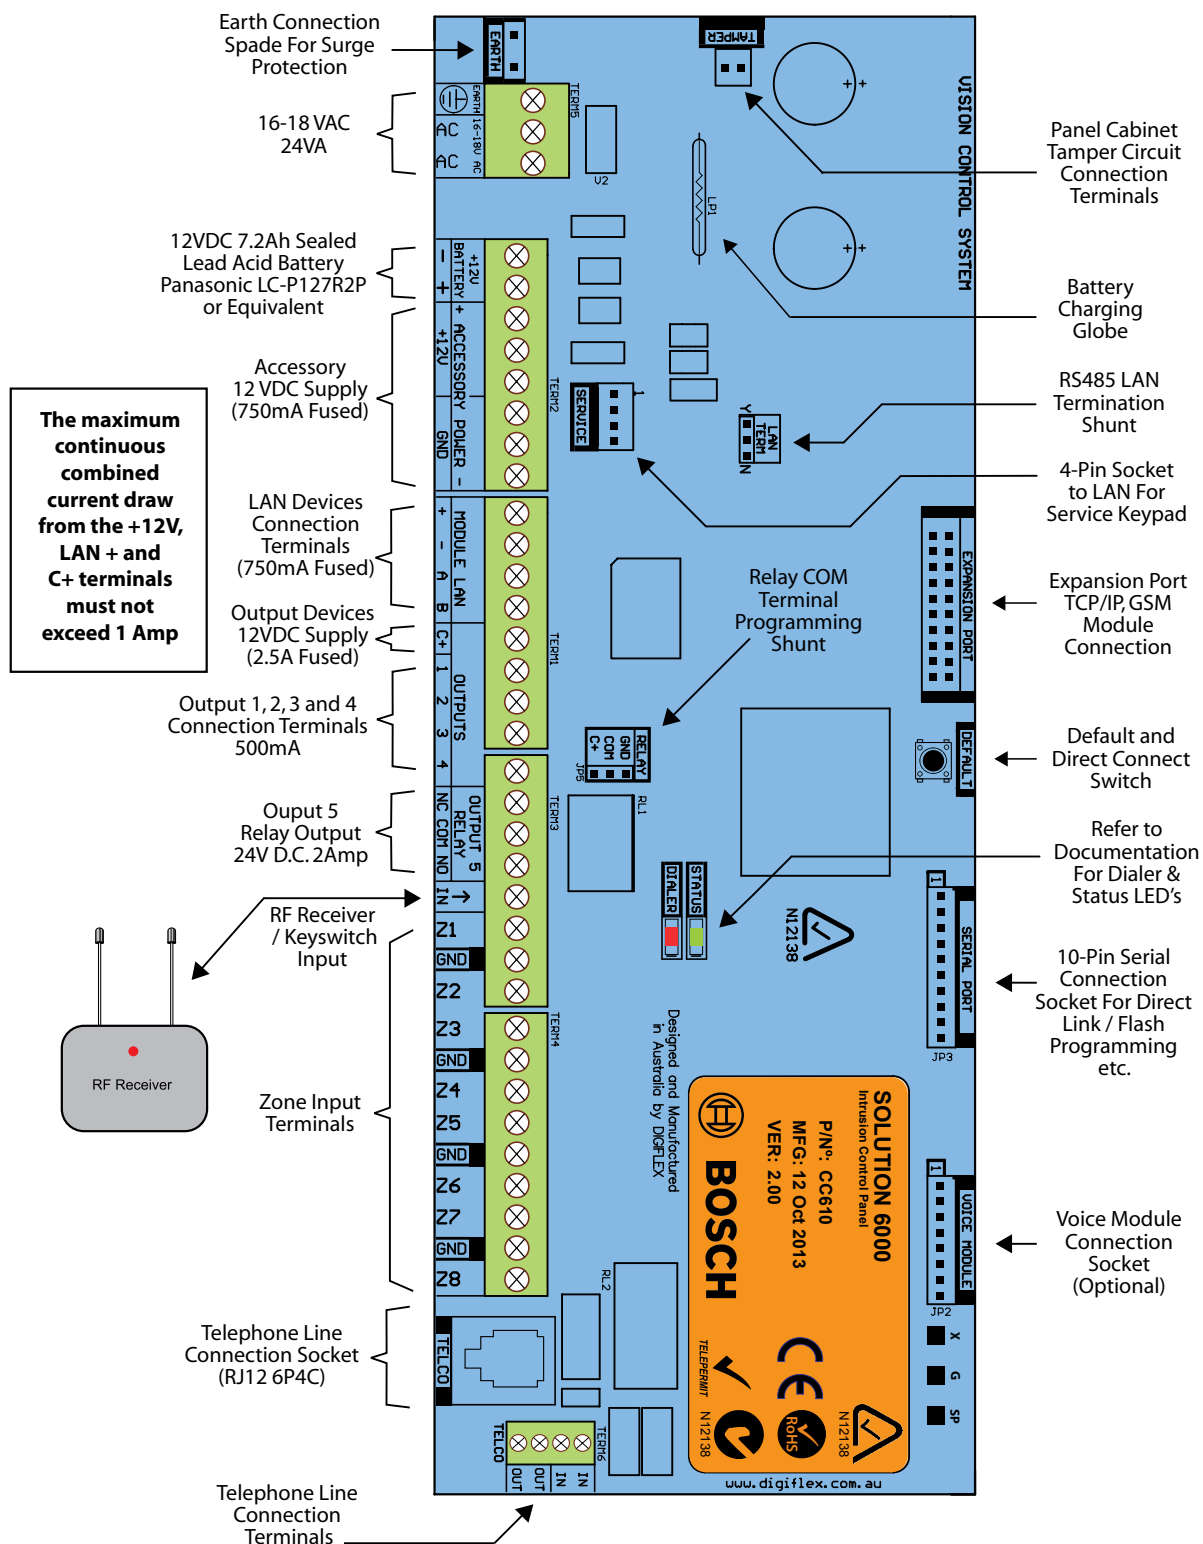


Figure 20: Solution 6000 Board Layout

 

Terminal Descriptions

Nº	Name	Description
1	Earth	Earth wire from this terminal is connected to the Mains earth.
2	~ (AC)	Connection of the AC plug pack transformer
3	~ (AC)	
4	BAT (-)	Negative and positive connections to the stand-by battery. 12 VDC / 7AH
5	BAT (+)	
6	+12 V	These terminals are used to power detectors and LAN devices up to 750 mA.
7	+12 V	
8	+12 V	
9	GND	
10	GND	
11	GND	
12	LAN +	These terminals are used to power LAN devices up to 750 mA.
13	LAN -	
14	LAN A	Connect the LAN A data terminal of any LAN device (eg. Keypads, expansion boards) to this terminal. The control panel supports up to 300 m of 24/0.20 (18 AWG) wire on these terminals.
15	LAN B	Connect the LAN B data terminal of any LAN device (eg. Keypads, expansion boards) to this terminal. The control panel supports up to 300 m of 24/0.20 (18 AWG) wire on these terminals.
16	COMM+	Alarm power capable of providing a maximum of 2.5 Amp (+). This terminal is PTC Fuse protected.
17	OUT 1	Programmable output, capable of providing a maximum of 500 mA (-). This terminal is PTC Fuse protected.
18	OUT 2	
19	OUT 3	
20	OUT 4	
21	N/C	2 A @ 24 VDC Relay Output - Form C contact
22	COM	
23	N/O	
24	INPUT	Programmable Input for RF Receivers, Keyswitch and other devices.
25	ZN 1	Zone 1 and 9 sensor loop input (+).
26	GND	Common (-) for Zone 1 and 2 sensor loop.
27	ZN 2	Zone 2 and 10 sensor loop input (+).
28	ZN 3	Zone 3 and 11 sensor loop input (+).
29	GND	Common (-) for Zone 3 and 4 sensor loop.
30	ZN 4	Zone 4 and 12 sensor loop input (+).
31	ZN 5	Zone 5 and 13 sensor loop input (+).
32	GND	Common (-) for Zone 5 and 6 sensor loop.
33	ZN 6	Zone 6 and 14 sensor loop input (+).
34	ZN 7	Zone 7 and 15 sensor loop input (+).

Nº	Name	Description
35	GND	Common (-) for Zone 7 and 8 sensor loop.
36	ZN 8	Zone 8 and 16 sensor loop input (+).
37	IN	These terminals are used to connect the telephone line from the street.
38	IN	
39	OUT	These terminals are used to connect the premises telephones.
40	OUT	

Table 4: Terminal Block Descriptions



The maximum combined continuous current draw from the +12V, LAN + and COMM+ terminals must not exceed 1 Amp

Board Connectors

Connector	Description
Service	This socket allow you to connect a service Keypad to the panel during installation.
Tamper	This socket is used to connect the panel enclosure tamper switch.
Default	This push button is used to reset the control panel back to factory default.
Voice Module	This is used to connect the optional Voice Command Module (CM101B).
Serial	This socket is used to connect serial devices to the control system like the direct link programming module.
Telco	This is a RJ12 6P/4C connector that allows you to connect the control panel to the PSTN telephone line.
Relay	The relay select PIN's allow you to easily program the relay common contact to switch either +12v or GND by fitting a plug on link.
Expansion Port	This port is used to connect additional modules to the control panel (eg. TCP/IP Interface Module etc)

Table 5: Board Connector Descriptions

About The Keypad

The keypad has 20 keys that allow you to input instructions and navigate the programming menu's as required. Some keys have a secondary function which is activated by pressing and holding them down for two seconds. Each key is described below.

Key	Description
0 to 9	The numeric keys allow you to enter your user PIN when required.
MENU	Use the [MENU] and the numeric keys to enter commands. The [MENU] key is also used to go back one level when navigating through menus or to exit a programming location without saving changes.
ALL ON ON	The [ON] key allows you to turn an area or output on. To turn all areas on at the same time when the system has been partitioned, press and hold the [ON] key for two seconds.
BYPASS PART	The [PART] key allows you to turn an area Part On. This key can also be used to bypass a zone or multiple zones when you press and hold for two seconds after you enter your PIN.
ALL OFF OFF	The [OFF] key allows you to turn an area or output off. To turn all areas off at the same time when the system had been partitioned, press and hold the [OFF] key for two seconds after you enter your PIN.
OK	The [OK] key allows you to save any changes and exit the command.
TEST MAIL	The [MAIL] key allows you to read stored mail. This key can also be used to initiate a dialler test when you press and hold for two seconds.
←	The [←] key allows you to move the cursor left when programming text or telephone numbers.
→	The [→] key allows you to move the cursor right when programming text or telephone numbers.
↑	The [↑] key allows you to navigate through menus or to toggle characters when programming telephone numbers.

Key	Description
↓	The [↓] key allows you to navigate through menus or to toggle characters when programming telephone numbers. Pressing The [↓] key will display current trouble conditions when the area that the keypad is displaying is disarmed.
→ + ↑ for 2 sec	Press and hold the [→] and [↑] keys together for 2 seconds will initiate a panic emergency alarm to be triggered. If programmed, the sirens will sound and the monitoring station will be notified.
← + → for 2 sec	Press and hold the [←] and [→] keys together for 2 seconds will initiate a fire emergency alarm to be triggered. If programmed, the sirens will sound and the monitoring station will be notified.
↑ + ↓ for 2 sec	Press and hold the [↑] and [↓] keys together for 2 seconds will initiate a medical emergency alarm to be triggered. If programmed, the sirens will sound and the monitoring station will be notified.

Table 6: Keypad Key Functions

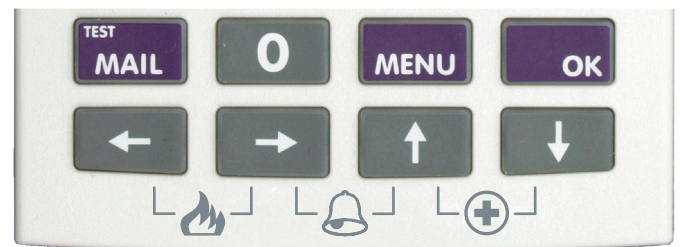









Figure 22: Keypad Emergency Alarm Trigger's

Status Icons / LED's

The following table lists the function of each of the ICON symbols and LED indicators on the keypad display.

Icon	Status	Meaning
<div>1</div> <div>2</div> <div>3</div> <div>4</div> <div>5</div> <div>6</div> <div>7</div> <div>8</div>	The keypad can be programmed to display area icons (1 to 8) that allow users to easily identify which areas have been turned on or off without the need to toggle between areas (See MENU 6-1-4).	
	On	The area is turned All On or Part On
	Off	The area is turned Off
	Flashing Fast	The area has an alarm
	On	System power is normal
	Flashing	System power is missing
	Flashing	A fire alarm is active
	Off	No fire alarm
	On	Fire alarm in memory (Turn the area All On and Off to Clear).
	On	Fire alarm in memory (Turn the area All On and Off to Clear).
	On	The existing service or trouble condition has been acknowledged.
	Off	No service or trouble conditions exist
	Flashing	A service or trouble condition is present that has not been acknowledged.
	On	The area is turned Part On.
	Off	The area is not turned Part On.
	On	The area is turned off.
	Off	The area is turned All On or Part On
	On	The area is turned All On or Part On
	Off	The area is turned Off
	On	All messages have been read.
	Off	Message queue is empty
	Flash	An unread message is in the queue.
	On	Area is ready to turn on (All On / Part On)
	Off	Not ready, Zone Open
Red LED	On	All On
	Flashing	Alarm
Green LED	On	Area is off.
	Flashing	Area not ready to turn on
Red & Green LED	Flashing	Installer programming mode is active.



	The WiFi enabled keypad or module has successfully connected to your local WiFi network.
	The WiFi enabled keypad or module is not connected to your local WiFi network.

Table 7: ICON & LED Indicator Meanings

Keypad Tones

All keypads emit several distinct tones and display text to alert you to system events. The volume of the keypad tones can be adjusted in MENU 6-0-7.

Type	Meaning
Fire Alarm Tone	When a fire zone sounds an alarm, the keypad will sound 3 seconds on and 2 seconds off (repeat).
Burglary Alarm Tone	When a burglary zone activates while your system is turned on, your keypad emits a continuous siren tone. It sounds for the time set by your security company.
Trouble Tone	When a system component is not functioning properly, your keypad sounds 4 fast short beeps followed by a 5 second pause (repeat).
Key Press Tone	Pressing any key on the keypad sounds one short beep, indicating that the key press is accepted.
Entry Delay Tone	When you enter the premises through a zone programmed for entry delay, the keypad sound a Hi/Low tone to remind you to turn off the area. If the area is not turned off before the entry delay expires, an alarm condition will sound and a report may be sent to your alarm company.
Exit Delay Tone	After you turn an area All On, the keypad will sound 1 short beep every second. During the last 10 seconds fast short beeps will be heard. If you don't exit before the delay time expires and an exit delay door is faulted, an alarm occurs.
Error Tone	If you enter an incorrect value when programming, the keypad will sound a 2 second tone.
Menu Mode	The keypad will sound a Lo/Hi tone to indicate you have entered MENU Mode and a Hi/Low tone to indicate you have exited MENU mode.
Chime Tone	The keypad sounds fast short beeps to alert you when a zone programmed for chime is faulted or unsealed.

Table 8: Keypad Tones

Keypad & Readers Setup

The control panel can have a maximum of 16 keypads and/or readers connected via the LAN terminals. Each keypad or reader must be set to a unique address before they will operate.

Each keypad or reader needs to be assigned to a home area via MENU 6-1-3. This sets the area the keypad or reader will display and control by default. Keypads and readers can be locked to a home area or allowed to roam or move between areas. At factory default, the home area is factory default to operate Area 1.

Set each keypad or reader address using "Table 9: DIP Switch Address Settings" on page 17 and "Table 10: Rotary Switch Address Settings" on page 17 as a guide.



Only 1 keypad can be assigned to each address. All keypads are supplied from the factory set to address 1. (OFF-OFF-OFF-OFF).

DIP Switch Address Select

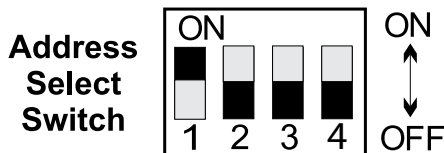


Figure 23: Keypad DIP Switch Address Settings

DIP Switch Address Settings				
Keypad/Reader N°	S1	S2	S3	S4
1	Off	Off	Off	Off
2	On	Off	Off	Off
3	Off	On	Off	Off
4	On	On	Off	Off
5	Off	Off	On	Off
6	On	Off	On	Off
7	Off	On	On	Off
8	On	On	On	Off
9	Off	Off	Off	On
10	On	Off	Off	On
11	Off	On	Off	On
12	On	On	Off	On
13	Off	Off	On	On
14	On	Off	On	On
15	Off	On	On	On
16	On	On	On	On

Table 9: DIP Switch Address Settings

Rotary Switch Address Select

Keypads and readers fitted to the system must be assigned a unique address on the LAN. Some keypads and readers include a rotary address switch for quick selection.

The following table shows how to set the address setting for each keypad and reader, as well as the number of devices the panel can support.

Rotary Switch Address Settings	
Address Number	Keypad/Reader N°
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16

Table 10: Rotary Switch Address Settings

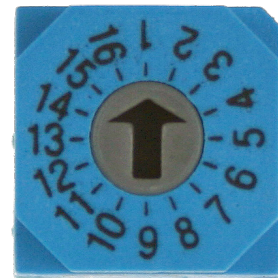


Figure 24: Rotary Switch Address Settings

DTMF Control Functions

Firmware includes comprehensive DTMF control of individual areas and outputs with full user PIN and TIMER GROUP access verification.

Unlike other systems, no additional hardware or modules are required for DTMF control. To configure the desired functions see MENU 5-3-5 DTMF Options.

How to Use DTMF Control

- Once the panel answers the incoming call, if either option 1, 2, 3 or 4 in MENU 5-3-5 is enabled, then the panel will play a short welcome jingle. You now have approximately 5 seconds to enter a valid PIN and log onto the panel.
- Enter PIN followed by the [#] key. If the PIN is valid the system will respond with two short beeps. If the PIN is invalid then a single long beep will be heard.

If a valid PIN is not entered in time, the panel will attempt to establish a modem connection as if connecting to the Solution Link software.

If this happens you will need to hang up for approximately 60 seconds before trying again.

- Once validated, the following commands can be performed. See the table below. If no keys are pressed for 20 seconds then the panel will play the exit jingle before terminating the session and hanging up. Pressing [#][#] at any time while connected will cause the panel to terminate the session.

DTMF Control Functions		
Operation	Command	Tone Response
Quick Arm All Areas	[0] + [#]	High, Medium, Low
Log In OK	[PIN] + [#]	Low, High
Error	Incorrect Entry	Long Beep
Turn Area ON	[1] + [Area N°] + [#] + [1]	Low, High
Turn Area OFF	[1] + [Area N°] + [#] + [2]	High, Low
Turn Output ON	[2] + [Output N°] + [#] + [1]	Low, High
Turn Output OFF	[2] + [Output N°] + [#] + [2]	High, Low
End Session	[#] + [#]	High, Medium, Low

Table 11: DTMF Remote Control Functions

DTMF EXAMPLES

Each example below shows the log on step for clarity. In practise is only necessary to log on once per DTMF control session.

To turn Area 1 ON enter the following

[2] [5] [8] [0] [#] = Log ON

[1] + [1] + [#] + [1] = Arm Area 1

To turn Output 10 ON enter the following

[2] [5] [8] [0] [#] = Log ON

[2] + [1] [0] + [#] + [1] = Turn Output 10 ON

To turn Output 12 OFF enter the following

[2] [5] [8] [0] [#] = Log ON

[2] + [1] [2] + [#] + [2] = Turn Output 12 OFF



If the DTMF Quick Arm option is enabled then it is possible to remotely arm all areas without logging onto the panel. Simply enter [0] + [#] following the welcome jingle.

Make sure that the phone being used to remotely control the panel is set to transmit DTMF tones when keys are pressed during the call. This option is disabled by default on some phones.

Programming Overview

The control panel incorporates a menu text driven interface. This interface is very similar to that found on many mobile phones. Once programming mode is entered you will see a number of menu options in the display and these may vary depending in the user authority level.

Entering Programming Mode

To enter installer program mode enter, PIN + [MENU].

The default Installer PIN is 1234.

The Red and Green LED indicators on the keypad will flash to confirm Installer programming mode is active.

Exiting Programming Mode

Press and hold down [MENU] key for 2 seconds.

Navigating The Menu

Using the up and down arrow keys to navigate, locate the desired menu item using the highlight bar and then press the [OK] key to select.

A new list of menu items will appear. Repeat the above until the desired menu item is located.

To navigate backwards through the menu items press the [MENU] key at any time. Alternatively if you know the direct menu item number press [MENU] + Item Number.

Key	Description
←	Scrolls Cursor Left
→	Scrolls Cursor Right
↑	Scrolls Cursor Up
↓	Scrolls Cursor Down
OK	Enter Menu Options or Saves Changes
MENU	Go Back One Level, Hold Down to Exit Programming Mode
0 to 9	Enter Data Value
ON	Turn On Bit Option
OFF	Turn Off Bit Option, Clear to End of Line

Table 12: Keys Used During Programming

Command Menu

When you first enter programming mode a special menu called the Command Menu will appear at the top of the menu tree. The Command Menu provides a list of the most common system functions like "Turn Chime Mode On", "Move To An Area" or "Turn An Area On". Use the up and down arrow keys to navigate and press [OK] to select the command.

Programming Option Bit Menus

Use the up and down arrow keys to scroll through the 8 different options. To select an option, press the [ON] key – a tick [✓] will be displayed. To deselect an option, press the [OFF] key.

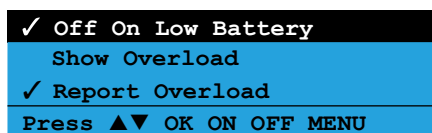


Figure 25: Sample Option Bit Menu Display

To save programming changes, press [OK], else press [MENU] to exit without saving.

Alpha Text

Text descriptions are available for Area Name, Zone Name, User Name, TimeZone Name, Holiday Name Prox Reader Name and Output Name. Each name can have a maximum of 20 characters.

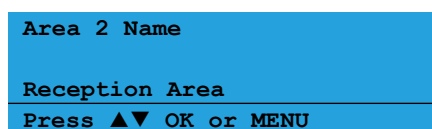


Figure 26: Area Text Programming Display

When programming text, each numeric key represents a different group of characters.

Pressing the same numeric key repeatedly will step you through the available characters assigned to the key. The text key layout is the same as most phones. Refer to the table below for detailed character information.

Key	Characters Assigned To Each Numeric Key									
1	.	,	?	!	-	&	`	1		
2	A	B	C	a	b	c	2			
3	D	E	F	d	e	f	3			
4	G	H	I	g	h	i	4			
5	J	K	L	j	k	l	5			
6	M	N	O	m	n	o	6			
7	P	Q	R	S	p	q	r	s	7	
8	T	U	V	t	u	v	8			
9	W	X	Y	Z	w	x	y	z	9	
0	SPACE	0								
↑	Scroll Up through entire character list									
↓	Scroll Down through entire character list									
←	Move to left one character position									
→	Move to right one character position									
OFF	Clear from cursor position to end of line									

Table 13: Text Keypad Character Set

Once the desired character is displayed press the right arrow key to move to the next character position. To save programming changes, press [OK], else press [MENU] to exit without saving.



The following additional special characters are available by scrolling using the up and down arrow keys. + - @ # \$ " & % * : () / < > =

Telephone Numbers

To program, select primary telephone number under [MENU] 5-1-1 then enter the digits of the telephone number and press the [OK] key to save. Use the up and down arrow keys to program special characters (*, # and Pause).

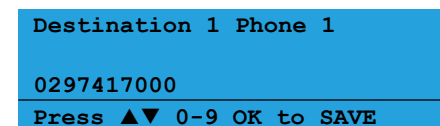


Figure 27: Telephone Number Programming Display

Key	Characters Assigned To Each Numeric Key
0 to 9	Enter the digits 0 to 9
↑ ↓	Scroll Up through entire character list 0 - 9 * # , comma = 2 second pause
← →	Move to left or right one character position
OFF	Clear from cursor position to end of line

Table 14: Phone Number Character Set

To save programming changes, press [OK], else press [MENU] to exit without saving.

List Options

Use the [↑] and [↓] keys to step through the available options. Press [OK] to save or [MENU] to exit without saving.



You can also enter the option number directly followed by [OK].

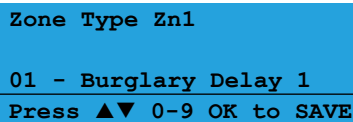


Figure 28: List Option Programming Display

Clock Programming

Use the left and right arrow keys to move to the field then use the up and down arrow keys to change. Press [OK] to save or [MENU] to exit without saving.



Scroll through hours to change from am to pm.

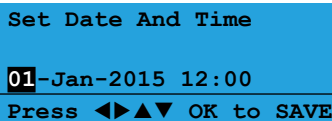


Figure 29: Clock Programming Display

Getting Started Back To Base

The following steps are the minimum requirements to get the system reporting back to base. Examples assume the panel is disarmed with no alarms and starting from factory default settings.

1. Enter programming mode.
[1][2][3][4] + [MENU]
2. Set date and time.
MENU 7-1-0
3. Change default installer PIN.
MENU 1-5-2
4. Change default master PIN.
MENU 1-1-1
5. Enter (Client) account number for Area 1.
MENU 2-2-0
6. Enter base station primary telephone number.
MENU 5-1-1
7. Enter base station secondary telephone number.
MENU 5-1-2
8. Press and hold down [MENU] to exit.

Service Mode

Service mode when activated disables dialler reporting, prevents all alarms and prevents all users from arming the system.

To Turn Service Mode ON

1. Enter programming mode.
[1][2][3][4] + [MENU]
2. Turn service mode on.
MENU 7-0-8
3. Follow display prompts.
4. Hold down [MENU] to exit.



Keypads will display the word Service when service mode is active.

To Turn Service Mode OFF

1. Enter programming mode.
[1][2][3][4] + [MENU]
2. Turn service mode off.
MENU 7-0-8
3. Follow display prompts.
4. Hold down [MENU] to exit.



Keypads will display the word Service when service mode is active.

Defaulting The System

Defaulting the system will reset all programming options back to the factory default setting. All programming information will be erased.

To Hardware Default

1. Remove all power to the system - AC and battery.
2. Press and hold the default push button, then apply power to the control panel.
3. Release the default button, The panel will reset and revert to normal operation when default is complete.

To Software Default

1. Enter programming mode.
[1][2][3][4] + [MENU]
2. Select factory default option.
MENU 7-0-4
3. The panel will reset and revert to normal operation when the default is complete.



You can disable factory defaulting using MENU 7-7-4. If factory defaulting has been disabled you *must* know the installer code to perform a factory default otherwise the system will need to be returned to your supplier for defaulting or you can purchase a CM255B Default Unlock Key which will unlock the panel in the field. Charges apply for defaulting if returned to the distributor.

Domestic Template Defaults

The following table list the changes that will occur when you select domestic default using MENU 7-0-3.

Program Option	Domestic Default Value
All Trouble Reports	Disabled
All Bypass Reports	Disabled
All Restore Reports	Disabled
Destination 1 TX Format	Domestic Reporting
Access Route	Log Only
Open / Close Reports	Log Only
Test Route	Log Only
System Route	Log Only

Table 15: Domestic Default Settings

Direct Link Programming

The panel can be programmed via the Solution Link Upload/Download software in either Direct Link or Remote Link modes. For Direct Link you will need a CM900B Direct Link module which connected the panels serial port to the PC.

Once the cable is connected you will need to hold down the default switch on the panel for 5 seconds to initiate the programming session. See Figure 20: for the default switch location. It is also possible to initiate the programming session via MENU 5-0-5 - Start Direct Link.

Zone Array

The feature allows you to view the condition of all zones on the panel in banks of 16 zones at a time. From the installer programming mode press MENU 3-0-1 to access the zone array.

Use the [↑] and [↓] arrow keys to scroll up and down the zone banks and press [OK] or [MENU] when finished.

The following information can be displayed depending on the current zone status.

N= NORMAL
S = SHORTED
A= ALARM
T= TAMPER
- = DISABLED

```
0000000001111111
1234567890123456
NSA-ANAT-----
PRESS ▲▼, OK or MENU
```

In the above example screen,

N = Zone 01 and 06 are Normal (Sealed)
S = Zone 02 is Shorted
A = Zone 03,05,07 are in Alarm (Unsealed)
T = Zone 08 is in Tamper Alarm (Unsealed)
- = Zone 04, 09-16 are Disabled (Unused)

Door Array

This feature allows you to view door status in groups of 16. From the installer programming mode press MENU 4-0-4 to access the door array.

Press [OK] or [MENU] when finished.

The following information can be displayed depending on the current door status.

L = Door Locked
U = Door Unlocked
O = Override
- = Disabled or Not Available

```
0000000001111111
1234567890123456
LLLLL---UUUUO---
Press ▲▼ OK or MENU
```

In the above example screen,
L = Doors 01 to 05 are Locked
O = Door 13 has a Override condition
U = Doors 09 to 12 area Unlocked
- = Doors 06 to 08 and Doors 14 to 16 are Disabled or Not Available

Output Array

This feature allows you to view output status in groups of 16. From the installer programming mode press MENU 4-0-2 to access the output array.

Use the up and down arrow keys to scroll up and down the output banks and press [OK] or [MENU] when finished.

The following information can be displayed depending on the current zone status.

N = NORMAL - Off Condition
T = TRIGGERED - On Condition
F = FAULT - Overload Condition
- = DISABLED

1. Enter [MENU] + [4] + [0] + [2] and use the up and down arrows to select the output group to view.
2. Use the [↑] and [↓] down arrows at any time to move to a new group. The keypad will display the following output array information for outputs 1 to 16.

```
0000000001111111
1234567890123456
NNNNN---TF-----
Press ▲▼ OK or MENU
```

In the above example screen,

N = Outputs 01 to 05 are Normal (Off)
F = Output 10 has a Fault (Overload)
T = Output 09 is Triggered (On)
- = Outputs 05 to 08 and Outputs 11 to 16 are Disabled or Not Available

Basic Reporting Reference

A complete reporting template is available on the Solution Link CD or from your nearest Bosch security products outlet. Your base station will need to create a specific reporting template for this and other new model Solution panels.

Point ID Table	Module Description
Ur999	Installer
Ur998	Remote User
Ur997	TimeZone
Ur996	Guard Tour
Ur001 - 995	Users
Ur000	Quick Arm
Zn001 - 264	Zones General
Zn001 - 064	Doors 1 - 64
Zn301 - 428	User Keyfob 1-128
Zn429 - 556	User Keyfob 129 - 256
Zn701 - 708	Door Controller 1 - 8
Zn711 - 718	Door Controller 9 - 16
Zn761 - 768	Lift Controller 1 - 8

Zn771 - 778	Lift Controller 9 - 16
Zn781 - 788	Input Expander 1 - 8
Zn791 - 798	Input Expander 9 - 16
Zn801 - 808	Universal Expander 1 - 8
Zn811 - 818	Universal Expander 9 - 16
Zn821 - 828	RF Receiver 1 - 8
Zn831 - 838	LAN Power Supply 1 - 8
Zn841 - 848	Serial Expander 1 - 8
Zn851 - 858	Output Expander 1 - 8
Zn860	GSM Module
Zn861	GSM Input 1
Zn862	GSM Input 2
Zn863	GSM Input 3
Zn864	GSM Input 4
Zn870	Ethernet Module
Zn871	Real Time Clock Module
Zn872	Voice Module
Zn873	Service Keypad
Zn881 - 888	Consoles 1 - 8
Zn891 - 898	Control Panel 1 - 8
Zn911 - 918	LAN Isolator 1 - 8
Zn921 - 928	LAN Isolator 9 - 16
Zn901 - 908	Destination Route 1 - 8
Zn971 - 978	Consoles 9 - 16
Zn901 - 908	Destination Route 1 - 8
Zn911 - 918	LAN Isolator 1 - 8
Zn921 - 928	LAN Isolator 9 - 16
Zn931 - 938	LAN Power Supply 9 - 16
Zn951 - 958	Output Expander 9 - 16
Zn971 - 978	Consoles 9 - 16

Table 16: Shortform Point ID Listing

Menu Reference Table

The Solution Controller includes a simple text menu system which makes all levels of programming extremely easy. Once a valid PIN has been entered followed by the MENU key the system will automatically determine which menus and option the user has access to and only those items will be displayed.

There are four basic grouping levels used;

1. A = All (No PIN Required)
2. U = User PIN Has Access
3. M = Master PIN Has Access
4. I = Installer PIN Has Access

The following table lists all programming menus and the authority level required to access them.

0	Commands		1	Access	2	Areas		
UMI	2-0-1	Turn Area On/Off		1-0	Commands		2-0	Commands
UMI	2-0-2	Turn All Areas On	MI	1-0-0	Erase User	AUMI	2-0-0	Area Status
UMI	2-0-3	Turn All Areas Off		1-1	PIN Codes	UMI	2-0-1	Turn Area On/Off
UMI	2-0-4	Move To Area		1-1-0	Change Own PIN	UMI	2-0-2	Turn All Areas On
AUMI	2-0-5	Chime On/Off	UMI	1-1-1	Change Other PIN	UMI	2-0-3	Turn All Areas Off
UMI	1-1-0	Change Own PIN	MI	1-1-2	Add PIN	UMI	2-0-4	Move To Area
AUMI	3-0-0	Zone Status	MI	1-1-3	Delete PIN	AUMI	2-0-5	Chime On/Off
AUMI	4-0-0	Output Status	MI	1-1-4	View PIN	MI	2-0-6	Chime Mode
UMI	4-0-1	Turn Output On/Off	I					
MI	7-1-0	Set Date And Time		1-2	Token		2-1	Area Properties
UMI	3-0-5	Smoke Sensor Reset		1-2-0	Add Token	MI	2-1-0	Area Name
UMI	3-9-0	Walk Test All Zones	MI	1-2-1	Delete Token	I	2-1-1	General Options
MI	4-9-0	External Siren Test	MI	1-2-2	Token Status	I	2-1-2	Input Options
MI	4-9-1	Internal Siren Test	MI	1-2-3	Edit Token	I	2-1-3	Output Options
MI	4-9-2	Strobe Test	MI			I	2-1-4	Reporting Options
UMI	5-0-1	Call/Answer RAS		1-3	RF Keyfob	I	2-1-5	Strobe Trigger
UMI	7-9-1	Battery Test		1-3-0	Add Keyfob	MI	2-1-6	Part Mode 1 Name
UMI	5-9-0	Test Dialler	MI	1-3-1	Delete Keyfob	MI	2-1-7	Part Mode 2 Name
I	7-0-8	Service Mode	MI	1-3-2	Test Keyfob	MI	2-1-8	Auto Arming
UMI	About		I					
				1-4	User Properties		2-2	Reporting
			MI	1-4-0	User Name	I	2-2-0	Account Dest 1
			MI	1-4-1	Area Assignment	I	2-2-1	Account Dest 2
			MI	1-4-2	User Options	I	2-2-2	Open Close Route
			MI	1-4-4	TimeZone Access		2-8	Timers
			MI	1-4-5	Door Assignment	MI	2-8-0	Exit Time
			MI	1-4-6	User Expire Date	MI	2-8-1	Entry Time 1
				1-5	Global Properties	MI	2-8-2	Entry Time 2
			I	1-5-0	PIN Length	MI	2-8-3	Part Entry Time
			I	1-5-1	PIN Retry Count	I	2-8-4	Auto Arm Pre Alert
			I	1-5-2	Installer PIN	I	2-8-6	Senior Watch Time
				1-6	Reporting		2-9	Area Testing
			I	1-6-0	Access Route	I	2-9-0	Area Watch
			I	1-6-1	Access Options	I	2-9-1	User Test Interval
				1-8	Fingerprint	I	2-9-2	Service Interval
			MI	1-8-0	Add Fingerprint	I	2-9-3	Test Options
			MI	1-8-1	Delete Fingerprint			
			MI	1-8-2	Fingerprint Status			

3 Inputs			4 Outputs			5 Comms		
	3-0 Commands			4-0 Commands			5-0 Commands	
AUMI	3-0-0	Zone Status	AUMI	4-0-0	Output Status	UMI	5-0-1	Call /Answer RAS
MI	3-0-1	Zone Array	UMI	4-0-1	Turn Output On/Off	MI	5-0-2	Call Forward On/Off
UMI	3-0-2	Bypass Zones	MI	4-0-2	Output Array	MI	5-0-3	Check Web Email
MI	3-0-3	Set Chime Zones	MI	4-0-3	Door Status	MI	5-0-4	Email System Log
MI	3-0-4	Set Part 2 Zones	MI	4-0-4	Door Array	MI	5-0-5	Start Direct Link
UMI	3-0-5	Smoke Sensor Reset	MI	4-0-5	Door Control	MI	5-0-6	Voice Setup
	3-1 Zone Properties			4-1 Properties		MI	5-0-8	Register Customer
MI	3-1-0	Zone Name	MI	4-1-0	Output Name	I	5-0-9	Register Installer
I	3-1-1	Zone Type	I	4-1-1	Event Type		5-1 Telephone Numbers	
I	3-1-2	Area Assignment	I	4-1-2	Event Assignment	I	5-1-0	Number Prefix
I	3-1-3	Pulse Count	I	4-1-3	Output Polarity	MI	5-1-1	Destination 1
I	3-1-4	Pulse Count Time	I	4-1-4	Time Parameter	MI	5-1-2	Destination 2
I	3-1-5	Door Assignment	I	4-1-5	Output Options	MI	5-1-6	Call Forward On
I	3-1-6	Report Route		4-2 Door Properties		MI	5-1-7	Call Forward Off
I	3-1-7	Report Options		MI	4-2-0	Door Name		5-2 Properties
I	3-1-8	Zone Options	I	4-2-2	Unlock TimeZone	I	5-2-0	Call Attempt Count
	3-3 RF Zone		I	4-2-3	Door Options	I	5-2-1	Dialler Options
I	3-3-0	Add RF Device		4-9 Output Testing		I	5-2-2	Phone Line Options
I	3-3-1	Delete RF Device	MI	4-9-0	External Siren Test	I	5-2-3	Country
I	3-3-2	Test RF Device	MI	4-9-1	Internal Siren Test	I	5-2-7	Set SMS Password
	3-4 Global Input Options		MI	4-9-2	Strobe Test		5-3 Remote Access	
I	3-4-0	EOL Value	MI	4-9-3	Fire Siren Test	I	5-3-0	Call Back Number
I	3-4-1	Keyswitch Options				I	5-3-1	RAS Security PIN
I	3-4-2	Input Options				I	5-3-2	Log Threshold
	3-5 PGM Input					I	5-3-3	Ring Count
I	3-5-0	Input Type				I	5-3-4	RAS Options
	3-6 Tamper Inputs					I	5-3-5	DTMF Options
I	3-6-0	Tamper Options				I	5-3-6	Voice Access Code
	3-9 Input Testing					I	5-3-7	CLI Numbers
UMI	3-9-0	Walk Test All Zones				I	5-3-8	User RAS PIN
UMI	3-9-1	Walk Test A Zone					5-4 Reporting	
I	3-9-2	Sensor Watch Time				I	5-4-0	TX Format Dest 1
						I	5-4-1	TX Format Dest 2
						I	5-4-2	Test Route
						I	5-4-3	System Route
						I	5-4-4	Emergency Route
						I	5-4-5	Swinger Dialler
						I	5-4-6	Burg Report Delay
						I	5-4-7	Fire Report Delay
							5-5 MyAlarm	
						I	5-5-0	IP Address
						I	5-5-1	IP Port
						I	5-5-2	MyAlarm Options
						I	5-5-7	Gateway Numbers
						MI	5-5-8	Email Address
						MI	5-5-9	Email Options

6 Devices			7 System		
5-6 IP Reporting			7-0 Commands		
I	5-6-0	Receiver IP	UMI	7-0-0	Panel Status
I	5-6-1	Receiver Port	UMI	7-0-1	System Trouble
I	5-6-2	Poll Rate	UMI	7-0-2	History Log
I	5-6-3	ACK Wait Time	I	7-0-3	Domestic Default
I	5-6-4	IP Format	I	7-0-4	Factory Default
I	5-6-5	Retry Count	I	7-0-5	Template Default
I	5-6-6	Encryption Key	MI	7-0-6	TimeZone Array
I	5-6-7	Conettix NNC	I	7-0-8	Service Mode
I	5-6-8	SIA IP Prefix			
I	5-6-9	User Name/Password			
5-7 IP Remote Access			7-1 Clock		
MI	5-7-0	IP Address	MI	7-1-0	Set Date And Time
MI	5-7-1	IP Port	I	7-1-1	Summertime On
I	5-7-2	IP RAS Options	I	7-1-2	Summertime Off
I	5-7-3	RAS Lockout Time	I	7-1-3	Locale
I	5-7-5	IPRS Address			
I	5-7-6	IPRS Port	7-3 Power		
			I	7-3-0	AC Options
			I	7-3-1	Battery Options
			I	7-3-2	Fuse Options
5-9 Comms Test			7-4 Siren		
UMI	5-9-0	Send Test Report	I	7-4-0	Tone
I	5-9-1	Test Report Time	I	7-4-1	Speed
I	5-9-2	Test Report Period	MI	7-4-2	Volume
I	5-9-3	Test Report Options	I	7-4-3	Siren Swinger
I	5-9-4	Test Route			
I	5-9-5	Dial Number Test	7-5 TimeZones		
			MI	7-5-0	Name
			MI	7-5-1	Time
			MI	7-5-2	Day
			MI	7-5-3	TimeZone Options
6-0 Commands			7-6 Holidays		
UMI	6-0-0	Device Status	MI	7-6-0	Holiday Name
I	6-0-1	LAN Secure	MI	7-6-1	Start Stop Dates
I	6-0-2	LAN Scan			
I	6-0-3	LAN Watch	7-7 System Options		
MI	6-0-7	Keypad Volume	I	7-7-0	General Options
MI	6-0-8	Keypad Contrast	I	7-7-1	Area Options
MI	6-0-9	Keypad Backlight	I	7-7-2	Keypad Idle Screen
			MI	7-7-3	Keypad Hi/Lo Temp
6-1 Keypads & Readers			I	7-7-4	Installer Options
MI	6-1-0	Name	I	7-7-5	Language
I	6-1-2	Area Options	MI	7-7-7	Site Name
I	6-1-3	Home Area			
I	6-1-4	General Options	7-9 System Testing		
I	6-1-5	Indicator Options	UMI	7-9-0	Walk Test All Zones
I	6-1-6	Emergency Keys	UMI	7-9-1	Battery Test
I	6-1-7	Door Assignment			
I	6-1-8	Lockout Time			
MI	6-1-9	WiFi Settings			
6-2 RF Devices					
I	6-2-0	Receiver Options			
I	6-2-1	Supervision Time			
I	6-2-2	RF Device Options			
I	6-2-3	Add RF Keypad			
I	6-2-4	Delete RF Keypad			
I	6-2-5	View RF Device ID			
6-3 Serial Device					
I	6-3-0	Device Type			
I	6-3-1	Baud Rate			
I	6-3-2	Flow Control			
6-5 GSM/GPRS					
MI	6-5-0	GSM/GPRS Status			
I	6-5-1	GSM/GPRS Options			
MI	6-5-5	CLI Triggers			
MI	6-5-6	SMS Control			
I	6-5-7	APN Server Name			
I	6-5-8	APN Username			
I	6-5-9	APN Password			
6-6 Ethernet Module					
I	6-6-0	Module IP Address			
I	6-6-1	Subnet Mask			
I	6-6-2	Default Gateway			
I	6-6-3	Module MAC Address			
I	6-6-9	Ethernet Options			

Table 17: Menu Structure And Layout

In order to keep the size of this guide down to a minimum we have shown only one example for some parameters and then listed the default values for the other similar parameters. For example the user default table below shows the default values for users 1 to 255. Similar tables are used to show zone defaults etc.

Access Programming

Access > Commands >	
Erase User	MENU 1-0-0
Access > PIN Codes >	
Change Own PIN	MENU 1-1-0
Change Other PIN	MENU 1-1-1
Add PIN	MENU 1-1-2
Delete PIN	MENU 1-1-3
View PIN	MENU 1-1-4
Access > Token >	
Add Token	MENU 1-2-0
Delete Token	MENU 1-2-1
Token Status	MENU 1-2-2
Edit Token	MENU 1-2-3

Parameter	User 1	User 2 - 255
User PIN	2580	
Name	User 1 Name	User 2 - 255
Area Assignment	1	1
User Options		
Master User	Y	
Reserved		
Arm Only		
Can Bypass	Y	Y
Auto Bypass	Y	Y
Always Report Op/CI	Y	Y
Reserved		
Log Credential		
TimeZone	01	01
Door Assignment		

Table 18: User Default Programming Options

Access > RF Keyfob >	
Add Keyfob	MENU 1-3-0
Delete Keyfob	MENU 1-3-1
Test Keyfob	MENU 1-3-2

Access > User Properties >

User Name

MENU 1-4-0

U

s

e

r

1

N

a

m

e

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Access > User Properties >		
Area Assignment		MENU 1-4-1
1	Security System	Y
2	Area 2 Name	N
3	Area 3 Name	N
4	Area 4 Name	N
5	Area 5 Name	N
6	Area 6 Name	N
7	Area 7 Name	N
8	Area 8 Name	N

Use the [↑] and [↓] keys to scroll the list of options. Select the option required, then press [ON] or [OFF] to enable or disable. A [✓] will display to indicate option set. Press [OK] to save when finished.

Access > User Properties >		
User Options		MENU 1-4-2
1	Master User	Y
2	Reserved	N
3	Arm Only	N
4	Can Bypass	Y
5	Auto Bypass Allowed	Y
6	Always Report Op/Cl	Y
7	Reserved	N
8	Log Credential	N

Access > User Properties >

TimeZone Access**MENU 1-4-4**

0 1

- 00 - Disabled
- 01 - 24 Hour TimeZone
- 02 - TimeZone 2 Name
- 03 - TimeZone 3 Name
- 04 - TimeZone 4 Name
- 05 - TimeZone 5 Name
- 06 - TimeZone 6 Name
- 07 - TimeZone 7 Name
- 08 - TimeZone 8 Name
- 09 - TimeZone 9 Name
- 10 - TimeZone 10 Name
- 11 - TimeZone 11 Name
- 12 - TimeZone 12 Name
- 13 - TimeZone 13 Name
- 14 - TimeZone 14 Name
- 15 - TimeZone 15 Name
- 16 - TimeZone 16 Name

Enter 0 - 16 + [OK] to assign the user to a TimeZone – Can only be assigned to one TimeZone.



All users are assigned to TimeZone 1 by default. This means they have 24 hour access to the system. To restrict access. To restrict access to users, refer to TimeZones.

Access > User Properties >

Door Assignment**MENU 1-4-5**

1	Door 1 Name	N
2	Door 2 Name	N
3	Door 3 Name	N
4	Door 4 Name	N
5	Door 5 Name	N
6	Door 6 Name	N
7	Door 7 Name	N
8	Door 8 Name	N
9	Door 9 Name	N
10	Door 10 Name	N
11	Door 11 Name	N
12	Door 12 Name	N
13	Door 13 Name	N
14	Door 14 Name	N
15	Door 15 Name	N
16	Door 16 Name	N

Multiple doors can be assigned to each user. Press 1 – 16, then press [ON] or [OFF] to toggle door on/off, then press [OK] to save.

Access > User Properties >

User Expire Date**MENU 1-4-6**

Access > Global Properties >

PIN Length**MENU 1-5-0**

(***) System Wide Parameter (***)

0 4

- 00 - Variable
- 01 - 1 Digit
- 02 - 2 Digits
- 03 - 3 Digits
- 04 - 4 Digits
- 05 - 5 Digits
- 06 - 6 Digits
- 07 - 7 Digits
- 08 - 8 Digits

Enter 00 - 08 + [OK] to program the PIN length.

Access > Global Properties >

PIN Retry Count**MENU 1-5-1**

(***) System Wide Parameter (***)

0 6

Use [↑] and [↓] keys or enter 00 – 15 + [OK] to program the PIN retry count (00 = Unlimited).

Access > Global Properties >

Installer PIN**MENU 1-5-2**

1 2 3 4 A A A A

(***) System Wide Parameter (***)

Use [0] – [9] keys to program the installer PIN + [OK] to save. Installer PIN can be up to 8 digits long.

Access > Reporting >

Access Route**MENU 1-6-0**

- 00 - Log Events Only
- 01 - Dest 1 + Log
- 02 - Dest 2 + Log
- 03 - Dest 1 & 2 + Log
- 04 - Dest 2 If 1 Fails

0 0

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (***) System Wide Parameter (***)

Access > Reporting >

Access Options**MENU 1-6-1**

1	Access Granted	Y
2	Access Denied	Y
3	Egress Granted	Y
4	Egress Denied	Y
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

Access > Fingerprint >

Add Fingerprint MENU 1-8-0

Access > Fingerprint >

Delete Fingerprint MENU 1-8-1

Access > Fingerprint >

Fingerprint Status MENU 1-8-2**Area Programming**

By default the control panel is configured for one area. Examples given in this document are for Area 1 only. If the system is configured for more than one area then you will be prompted on the keypad to select the area you want to work on.

Areas > Commands >

Area Status MENU 2-0-0**Turn Area On/Off** MENU 2-0-1**Turn All Areas On** MENU 2-0-2**Turn All Areas Off** MENU 2-0-3**Move To Area** MENU 2-0-4**Chime On/Off** MENU 2-0-5**Chime Mode** MENU 2-0-6

Areas > Area Properties >

Area Name MENU 2-1-0

S e c u r i t y S y s t e m

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Areas > Properties >

General Options MENU 2-1-1

1	Exit Time Restart	N
2	Reset Alarm Memory	N
3	Duress Allowed	Y
4	Fault ACK Required	N
5	One Key Arming	Y
6	One Key Part On	Y
7	Link To Common Area	N
8	One Key Part Off	N

Areas > Properties >

Input Options MENU 2-1-2

1	Non Sequential	Y
2	Pulse Count H/Over	Y
3	Senior Watch	N
4	Reset Smoke On Arming	Y
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Auto Arm In Part 1	N

Areas > Properties >

Output Options MENU 2-1-3

1	SPK Beeps Keyfob	Y
2	SPK Beeps Key/Sw	Y
3	SPK Strobe In Part On	Y
4	Alarm On PIN Retry	Y
5	Alarm Exit Error	N
6	Alarm Key/Sw Tamper	Y
7	Reserved	N
8	Reserved	N

Areas > Properties >

Reporting Options MENU 2-1-4

1	Report PIN Retry	Y
2	Report Exit Error	Y
3	Smart Lockout	N
4	Reserved	N
5	Cancel Report	Y
6	Reserved	N
7	Op/CI In Part On	N
8	Op/CI After Alarm	N

Areas > Properties >

Strobe Trigger MENU 2-1-5

1	Audible Burglary	Y
2	Silent Burglary	N
3	Fire Alarm	Y
4	Keyfob On/Off	N
5	Keyswitch On/Off	N
6	Reserved	N
7	24Hr Alarm	Y
8	Reserved	N

Areas > Area Properties >

Part Mode 1 Name**MENU 2-1-6**

P a r t 1 A r e a 1 N a m e

Use the [←] and [→] keys to scroll cursor left and right.
Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Areas > Area Properties >

Part Mode 2 Name**MENU 2-1-7**

P a r t 2 A r e a 1 N a m e

Use the [←] and [→] keys to scroll cursor left and right.
Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Areas > Area Properties >

Auto Arming**MENU 2-1-8**

0 0

00 - Disabled

01 - 24 Hour TimeZone

02 - TimeZone 2 Name

03 - TimeZone 3 Name

04 - TimeZone 4 Name

05 - TimeZone 5 Name

06 - TimeZone 6 Name

07 - TimeZone 7 Name

08 - TimeZone 8 Name

09 - TimeZone 9 Name

10 - TimeZone 10 Name

11 - TimeZone 11 Name

12 - TimeZone 12 Name

13 - TimeZone 13 Name

14 - TimeZone 14 Name

15 - TimeZone 15 Name

16 - TimeZone 16 Name

Enter 0 - 16 + [OK] to assign the area to a TimeZone – Can only be assigned to one TimeZone (0 = Disabled). To set the start/stop and days of the week that the area will automatically arm, refer to TimeZone menu's.

Areas > Reporting >

Account Dest 1**MENU 2-2-0**

0 0 0 0 0 0 0 0 0 0 0 0

Program the area account number for Destination 1 here (Enter digits 0 – 9 + [OK] to save).

Areas > Reporting >

Account Dest 2**MENU 2-2-1**

0 0 0 0 0 0 0 0 0 0 0 0

Program the area account number for Destination 1 here (Enter digits 0 – 9 + [OK] to save).

Areas > Reporting >

Open Close Route**MENU 2-2-2**

00 - Log Events Only

0 1

01 - Dest 1 + Log

02 - Dest 2 + Log

03 - Dest 1 & 2 + Log

04 - Dest 2 If 1 Fails

Use [↑] and [↓] keys or enter 0 - 4 + [OK] to program which destination 'Open' and 'Close' reports are sent to.

Areas > Timers >

Exit Time**MENU 2-8-0**

0 6 0

Seconds

Enter 000 – 255 + [OK] to program the exit time in seconds.

Areas > Timers >

Entry Time 1**MENU 2-8-1**

0 2 0

Seconds

Enter 000 - 255 + [OK] to program the entry time in seconds.

Areas > Timers >

Entry Time 2**MENU 2-8-2**

0 4 0

Seconds

Enter 000 - 255 + [OK] to program the entry time in seconds.

Areas > Timers >

Part Entry Time**MENU 2-8-3**

0 6 0

Seconds

Enter 000 - 255 + [OK] to program the part entry time in seconds.

Areas > Timers >

Auto Arm Pre Alert**MENU 2-8-4**

(***) System Wide Parameter (***)

0 1 0

Minutes

Enter 000 – 255 + [OK] to program the pre-alert time in minutes (0 = No Pre-Alert).

Areas > Timers >

Senior Watch Time**MENU 2-8-6**

(***) System Wide Parameter (***)

0 0 0

Hours

Enter 000 – 255 + [OK] to program the senior watch interval in hours.

Areas > Area Testing >

Area Watch**MENU 2-9-0**

(***) System Wide Parameter (***)

0 1 2

Weeks

Enter 000 – 255 + [OK] to program the number of weeks before registering an inactivity event.

Areas > Area Testing >

User Test Interval**MENU 2-9-1**

(***) System Wide Parameter (***)

0 0 0

Days

Enter 000 – 255 + [OK] to program the number of days before a user test is requested.

Areas > Area Testing >

Service Interval**MENU 2-9-2**

(***) System Wide Parameter (***)

0 0 0

Weeks

Enter 000 – 255 + [OK] to program the number of weeks required between installer services.

Areas > Area Testing >

Test Options**MENU 2-9-3**

1	User Test Required	Y
2	Reserved	N
3	Reserved	N
4	Reserved	N
5	Reserved	N
6	Walk Test Report	Y
7	Walk Test 24Hr	N
8	Walk Test Fire	N

Input Programming

Inputs > Commands >

Zone Status**MENU 3-0-0****Zone Array****MENU 3-0-1****Bypass Zones****MENU 3-0-2****Set Chime Zones****MENU 3-0-3****Set Part 2 Zones****MENU 3-0-4****Smoke Sensor Reset****MENU 3-0-5**

Inputs > Zone Properties >

Zone Name**MENU 3-1-0**

Z o n e 1 N a m e

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Inputs > Zone Properties >

Zone Type**MENU 3-1-1**

0 1

- | | |
|------------------------|------------------------|
| 00 - Not Used | 08 - Hold Up 24Hr |
| 01 - Burglary Delay 1 | 09 - Medical 24Hr |
| 02 - Burglary Delay 2 | 10 - Panic 24Hr |
| 03 - Burglary Instant | 11 - Fire 24Hr |
| 04 - Burg Inst No Exit | 12 - Not Used |
| 05 - Burg Handover | 13 - Keyswitch Zone |
| 06 - Burglary 24Hr | 14 - Display Only |
| 07 - Tamper 24Hr | 15 - Non Burglary 24Hr |

Use [↑] and [↓] keys or enter 0 – 15 + [OK] to program the zone type.

Inputs > Zone Properties >

Area Assignment**MENU 3-1-2**

0 1

- | | |
|----------------------|------------------|
| 00 - No Area | |
| 01 - Security System | 05 - Area 5 Name |
| 02 - Area 2 Name | 06 - Area 6 Name |
| 03 - Area 3 Name | 07 - Area 7 Name |
| 04 - Area 4 Name | 08 - Area 8 Name |

Use [↑] and [↓] keys or enter 0 – 8 then press [OK] to program.

Zone Assignments

Zone Assignment Table									
Module Number	Address Setting					Zone Numbers (Single EOL)	Zone Numbers (Alarm+Tamper EOL)	Zone Numbers (Split EOL)	Single or Alarm + Tamper EOL With CM705B + CM707B Module
	SW1	SW2	SW3	SW4	SW5				
Control Panel						1 to 8	1 to 8	1 to 16	1 to 8
1 =	OFF	OFF	OFF	OFF	OFF	17 to 24	17 to 24	17 to 32	17 to 24
									25 to 32 on the CM707B
2 =	ON	OFF	OFF	OFF	OFF	33 to 40	33 to 40	33 to 48	33 to 40
									41 to 48 on the CM707B
3 =	OFF	ON	OFF	OFF	OFF	49 to 56	49 to 56	49 to 64	49 to 56
									57 to 64 on the CM707B
4 =	ON	ON	OFF	OFF	OFF	65 to 72	65 to 72	65 to 80	65 to 72
									73 to 80 on the CM707B
5 =	OFF	OFF	ON	OFF	OFF	81 to 88	81 to 88	81 to 96	81 to 88
									89 to 96 on the CM707B
6 =	ON	OFF	ON	OFF	OFF	97 to 104	97 to 104	97 to 112	97 to 104
									105 to 112 on the CM707B
7 =	OFF	ON	ON	OFF	OFF	113 to 120	113 to 120	113 to 128	113 to 120
									121 to 128 on the CM707B
8 =	ON	ON	ON	OFF	OFF	129 to 136	129 to 136	129 to 144	129 to 136
									137 to 144 on the CM707B

Table 19: Zone Assignments

Inputs > Zone Properties >

Pulse Count

MENU 3-1-3

Pulses

- | | |
|-----------------------|-------------------------|
| 00 - No Pulse Count | 08 - 8 Inertia Pulses |
| 01 - 1 Pulse | 09 - 9 Inertia Pulses |
| 02 - 2 Pulses | 10 - 10 Inertia Pulses |
| 03 - 3 Pulses | 11 - 11 Inertia Pulses |
| 04 - 4 Pulses | 12 - 12 Inertia Pulses |
| 05 - 5 Pulses | 13 - Door Open Too Long |
| 06 - 6 Inertia Pulses | 14 - PreDelay |
| 07 - 7 Inertia Pulses | 15 - Reserved |

Enter 0 – 15 + [OK] to program the number of pulses the zone must register within the zone pulse count time.

Inputs > Zone Properties >

Pulse Count Time

MENU 3-1-4

Seconds

Enter value between 000 – 255 then select multiplier of seconds, minutes or hours. Press [OK] to save. Use the [←] and [→] keys to toggle between value and multiplier settings.

Inputs > Zone Properties >

Door Assignment

MENU 3-1-5

- | | |
|------------------|-------------------|
| 00 - Disabled | 09 - Door 9 Name |
| 01 - Door 1 Name | 10 - Door 10 Name |
| 02 - Door 2 Name | 11 - Door 11 Name |
| 03 - Door 3 Name | 12 - Door 12 Name |
| 04 - Door 4 Name | 13 - Door 13 Name |
| 05 - Door 5 Name | 14 - Door 14 Name |
| 06 - Door 6 Name | 15 - Door 15 Name |
| 07 - Door 7 Name | 16 - Door 16 Name |
| 08 - Door 8 Name | |

A single door can be assigned to each zone. Use the [↑] and [↓] keys to highlight door name, then press [OK] to save.

Inputs > Zone Properties >

Report Route

MENU 3-1-6

- 00 - Log Events Only
 01 - Dest 1 + Log
 02 - Dest 2 + Log
 03 - Dest 1 & 2 + Log
 04 - Dest 2 If 1 Fails

Use [↑] and [↓] keys or enter 0 - 4 + [OK] to set the destination zone reports are sent to.

Zone Default Table

The table below list the default values for all zone parameters in the Solution 6000. By default, zones 5 to 16 are set as Instant zones and zones 17 to 144 are set as Not Used. Zones marked as Not Used do not require EOL resistors to be fitted.

Programming	Zone 1	Zone 2	Zone 3	Zone 4	Zones 5 - 16	Zones 17 - 144
Zone Name	Zone 1	Zone 2	Zone 3	Zone 4	Zone 5 to 16	Zone 17 to 144
Zone Type	1 = Delay 1	5 = Handover	5 = Handover	5 = Handover	3 = Instant	0 = Not Used
Area Assignment	1	1	1	1	1	1
Pulse Count	0	0	0	0	0	0
Pulse Count Time	120	120	120	120	120	120
Door Assignment	0	0	0	0	0	0
Report Route	2	2	2	2	2	2
Reporting Options						
Lockout Dialler	Y	Y	Y	Y	Y	Y
Report Alarm	Y	Y	Y	Y	Y	Y
Report Troubles	Y	Y	Y	Y	Y	Y
Report Bypass	Y	Y	Y	Y	Y	Y
Report Restores	Y	Y	Y	Y	Y	Y
Delay Reporting	N	N	N	N	N	N
Zone Options						
Lockout Siren	Y	Y	Y	Y	Y	Y
Silent Alarm	N	N	N	N	N	N
Inverted Seal	N	N	N	N	N	N
Bypass Allowed	Y	Y	Y	Y	Y	Y
Sensor Watch	N	N	N	N	N	N
Armed In Part On	Y	Y	Y	Y	Y	Y
No EOL Required	N	N	N	N	N	N
Test On Exit	N	Y	Y	Y	Y	Y

Table 20: Zone Defaults

Inputs > Zone Properties >

Report Options**MENU 3-1-7**

1	Lockout Dialler	Y
2	Report Alarm	Y
3	Report Troubles	Y
4	Report Bypass	Y
5	Reserved	N
6	Reserved	N
7	Report Restores	Y
8	Delay Reporting	N

Inputs > Zone Properties >

Zone Options**MENU 3-1-8**

1	Lockout Siren	Y
2	Silent Alarm	N
3	Inverted Seal	N
4	Bypass Allowed	Y
5	Sensor Watch	N
6	Armed In Part On	Y
7	No EOL Required	N
8	Test On Exit	Y

Inputs > RF Zone >

Add RF Device**MENU 3-3-0****Delete RF Device****MENU 3-3-1****Test RF Device****MENU 3-3-2**

Inputs > Global Input Options >

EOL Value**MENU 3-4-0**

(***) System Wide Parameter (***)

0 5

00 - No EOL	08 - 6k8 Ohm
01 - 1k0 Ohm	09 - 8k1 Ohm
02 - 1k5 Ohm	10 - 10k Ohm
03 - 2k2 Ohm	11 - 6K8 Alarm + 2k2 Tamp
04 - 2k7 Ohm	12 - 10k Alarm + 10k Tamp
05 - 3k3 Ohm	13 - 22k Ohm
06 - 4k7 Ohm	14 - 3k3 Alarm + 6k8 Tamp
07 - 5k6 Ohm	15 - Split EOL 3k3 //6k8

Use [↑] and [↓] keys or enter 0 - 15, then press [OK] to program globally the EOL resistor for all zones.

Inputs > Global Input Options >

Keyswitch Options**MENU 3-4-1**

(***) System Wide Parameter (***)

0 0

00 - Latching All On/Off	05 - Pulse All On/Off
01 - Latching All On	06 - Pulse All On
02 - Latch Part On/Off	07 - Pulse Part On/Off
03 - Latching Part On	08 - Pulse Part On
04 - Latching Off	09 - Pulse Part Off

Use [↑] and [↓] keys or enter 0 - 9, then press [OK] to program how the keyswitch will operate.

Inputs > Global Input Options >

Input Options**MENU 3-4-2**

1	Tamper On Short	N
2	Reserved	N
3	Response Time 500msec	N
4	Reserved	N
5	Keyswitch Open Close	Y
6	Alarm On Tamper	N
7	Reserved	N
8	Reserved	N

(***) System Wide Parameter (***)

Inputs > PGM Input >

Keyswitch Options**MENU 3-5-0**

0 0

00 - Disabled	03 - Simple RF On/Off
01 - Latching On/Off	04 - Bosch Serial Rcvr
02 - Pulse On/Off	05 - Crow Serial Rcvr (TBA)

Enter 0 - 8 + [OK] to select the interface method used for the given RF receiver.

Inputs > Tamper Inputs >

Tamper Options**MENU 3-6-0**

1	Display Panel Tpr	Y
2	Report Panel Tpr	Y
3	Audible Panel Tpr	Y
4	Display Expander Tpr	Y
5	Report Expander Tpr	Y
6	Audible Expander Tpr	Y
7	Reserved	N
8	Reserved	N

Inputs > Input Testing >

Walk Test All Zones**MENU 3-9-0**

Inputs > Input Testing >

Walk Test A Zones**MENU 3-9-1**

Inputs > Input Testing >

Sensor Watch Time**MENU 3-9-2**

(***) System Wide Parameter (***)

0 3 0

Days

Enter 0 – 255 + [OK] to program the sensor watch time in days (0 = Disabled).

Output Programming

Outputs > Commands >

Output Status MENU 4-0-0

Turn Output On/Off MENU 4-0-1

Output Array MENU 4-0-2

Door Status MENU 4-0-3

Door Array MENU 4-0-4

Door Control MENU 4-0-5

Outputs > Properties >

Output Name MENU 4-1-0

O u t p u t 1 N a m e

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Outputs > Properties >

Event Type MENU 4-1-1

0 0 0

Use [↑] and [↓] keys or enter desired event type 0 – 255 + [OK]. See output event type table for available options.

Output Default Table

The table below list the default values for all Output parameters in the control panel. Outputs 1 to 4 are high current digital outputs and Output 5 is the onboard relay output. Outputs 9 to 40 are only available if the optional modules are fitted. Options marked N/A = Not Applicable.

Programming Option	Output 1	Output 2	Output 3	Output 4	Output 5	Output 9 - 40
Output Name	External Siren	Strobe Light	Smoke Sensor PWR	Internal Siren	On Board Relay	Output x Name
Event Type	36 (External Siren)	48 (Strobe)	49 (Smoke Sensor GND)	37 (Internal Siren)	54 (Keyfob Function 2)	00 (Not Used)
Event Assignment	0	0	0	0	0	0
Output Polarity	14 Speaker Output	6 1 Shot Low + Reset	11 Low 1 Shot Open	6 1 Shot Low + Reset	4 Open 1 Shot Low	0 Open To Low
Time Parameter						
N° Of Hours	000	008	000	000	000	000
N° Of Minutes	005	000	000	005	000	000
N° Of Seconds	000	000	010	000	002	000
N° Of 1/10 Seconds	000	000	000	000	000	000
Output Options						
Off On Low Battery	Y	Y	N	Y	N	N
Guest Control	N	N	N	N	N	N
Reserved	N	N	N	N	N	N
Monitor Overload	Y	Y	Y	Y	N	N
Monitor Device Fail	Y	Y	N	Y	N	N
Alarm On Device Fail	N	N	N	N	N	N
Block If All On	N	N	N	N	N	N
Show Status On Keypad	N	N	N	N	N	N

Table 21: Output Default Table

Output Event Types

00 - Disabled	P	26 - Entry Timing	A	52 - Exit Error	A
01 - Battery Trouble	P	27 - Exit Timing	A	53 - Keyfob Function 1	A
02 - AC Trouble	P	28 - End Of Exit Time	A	54 - Keyfob Function 2	A
03 - Telco Line Fail	P	29 - Chime On	A	55 - Output In PreDelay	Op
04 - Comm Fail	Rr	30 - Chime Zone Trigger	A	56 - Follow PIN Code	Ur
05 - 3rd Dial Attempt	Rr	31 - Auto Arm Pre Alert	A	57 - Part Entry Time	A
06 - Dest Reporting	Rr	32 - Ready To Arm All On	A	58 - TimeZones	Tz
07 - Disabled		33 - Ready To Part Arm	A	59 - Temperature Hi/Lo	Kp
08 - Dest Kiss Off	Rr	34 - Ready To Part 2 Arm	A	60 - Door	Dr
09 - User Keyfob Func 1	Ur	35 - Close Sent OK	A	69 - User Control	Ur
10 - User Keyfob Func 2	Ur	36 - External Audible	A	61 - Door Open Too Long	Dr
11 - Dialler Disabled	P	37 - Internal Audible	A	70 - User Panic	Ur
12 - Output Device Missing	P	38 - Any Zone Alarm	A	71 - CLI Trigger	CLI
13 - Output Trouble	Op	39 - Fire Alarm	A	72 - GSM Signal Lost	P
14 - Panel On Line	P	40 - Burglary Alarm	A	73 - GPRS Failure	P
15 - Incoming Call	P	41 - Silent Alarm	A	74 - Ethernet Fail	P
16 - System Trouble	P	42 - Duress Alarm	A	75 - Macro	Ma
17 - Box Tamper	Zn	43 - Keypad Medical	A		
18 - Zone Trouble	Zn	44 - Keypad Fire	A		
19 - Zone Mirror	Zn	45 - Keypad Panic	A		
20 - Zone Alarm	A	46 - Device Tamper	A		
21 - Area Disarmed	A	47 - Access Denied	A		
22 - Area Part Or All On	A	48 - Strobe	A		
23 - Area All On	A	49 - Smoke Sensor GND	A		
24 - Area Part On	A	50 - Sensor Watch	A		
25 - Area Part 2 On	A	51 - Senior Watch	A		

Legend:

(Ma) = Macro	(CLI) = CLI Trigger Table	(A) = Area Event Assignment
(P) = Panel Event Assignment	(Op) = Output Event Assignment	(Zn) = Zone Event Assignment
(Ur) = User Event Assignment	(Tz) = TimeZone Event Assignment	(Dr) = Door Group Event Assignment
(Kp) = Keypad	(Rr) = Reporting Destination	

Table 22: Output Event Types

Output Assignments

Output Assignments						
Module Number	Address Setting					Output Number
	SW1	SW2	SW3	SW4	SW5	
Control Panel						1 to 5
Virtual Outputs						6 to 8
1 =	OFF	OFF	OFF	OFF	OFF	9 to 12
2 =	ON	OFF	OFF	OFF	OFF	13 to 16
3 =	OFF	ON	OFF	OFF	OFF	17 to 20
4 =	ON	ON	OFF	OFF	OFF	21 to 24
5 =	OFF	OFF	ON	OFF	OFF	25 to 28
6 =	ON	OFF	ON	OFF	OFF	29 to 32
7 =	OFF	ON	ON	OFF	OFF	33 to 36
8 =	ON	ON	ON	OFF	OFF	37 to 40

Table 23: Address Configuration and Output Assignments

Outputs > Properties >

Event Assignment

MENU 4-1-2

0 0 0

(A) = Area Assignment

Assign to Area 1 to 8 (0 = Any Area)

(P) = Control Panel

(Op) = Output Assignment

Assign to Output 1 to 40 (0 = Any Output)

(Zn) = Zone Assignment

Assign to Zone 1 to 144 (0 = Any Zone)

(Ur) = User Assignment

Assign to User 1 to 255 (0 = Any User)

(Tz) = TimeZone Assignment

Assign to TimeZone 1 to 16 (0 = Any TimeZone)

(Dr) = Door Assignment

Assign to Door Assignment 1 to 16 (0 = Any Door)

(Kp) = Keypad Assignment

Assign to Keypad/LAN Reader 1 to 16 (0 = Any Keypad/LAN Reader)

(Rr) = Reporting Destination

Assign to Destination 1 or 2 (0 = Destination 1 and/or Destination 2)

(Ma) = Macro Group Assignment

Assign to Macro Group (0 = Any Macro Group)

(CLI) = CLI Trigger Table

Assign to CLI Trigger Table 1 or 2 (0 = Both Tables)

Use [↑] and [↓] keys to program which Area, User, Zone, Keypad or Door Assignment etc you want the output to follow then press [OK].

Outputs > Properties >

Output Polarity

MENU 4-1-3

0 0

00 - Open To Low

08 - Low To Open + Pre

01 - Open To Low + Pre

09 - Low Latching Open

02 - Open Latching Low

10 - Low Pulsing Open

03 - Open Pulsing Low

11 - Low 1 Shot Open

04 - Open 1 Shot Low

12 - 1 Shot Open+Retrigger

05 - 1 Shot Low+Retrigger

13 - 1 Shot Open + Reset

06 - 1 Shot Low + Reset

14 - Speaker Output

07 - Low To Open

15 - Toggle

Enter 0 – 15 + [OK] to program the output polarity type. Each output can only have one polarity type programmed.

Outputs > Properties >

Time Parameter

MENU 4-1-4

0 0 0

Hour

0 0 0

Minute

0 0 0

Seconds

0 0 0

10th Sec

The time base parameter is only applicable for output types that are programmed as one shot or pulsing. Program 0 to 255 for each of the units (Hour, Minute, Seconds and 10th of a second) for the time parameter. Add the units together to give the total one shot time or pulsing on/off time.

One Shot Mode

The time base is the length of time that the output will operate.

For example, you may want a strobe output to operate for 1 hour, Either of the examples below will achieve the 1 hour time.

Total Time	Hour	Minute	Seconds	10th Sec
60 Minutes	001	000	000	000
60 Minutes	000	060	000	000

Table 24: One-Shot Polarity Example

Pulsing Mode

The time base is the unit of time that the output will pulse on and off. If the time base is programmed for 60 seconds, the output will pulse on for 60 seconds and then off for 60 seconds (repeat) until the output is reset.

Outputs > Properties >

Output Options**MENU 4-1-5**

1	Off On Low Battery	Y
2	Guest Control	N
3	Reserved	N
4	Monitor Overload	Y
5	Monitor Device Fail	Y
6	Alarm On Device Fail	N
7	Block If All On	N
8	Show Status On Keypad	N

Outputs > Door Properties >

Door Name**MENU 4-2-0**

D	o	o	r	1	N	a	m	e											
---	---	---	---	---	---	---	---	---	--	--	--	--	--	--	--	--	--	--	--

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Outputs > Door Properties >

Unlock TimeZone**MENU 4-2-2**

0	0
---	---

00 - Disabled

01 - 24 Hour TimeZone

02 - TimeZone 2 Name

03 - TimeZone 3 Name

04 - TimeZone 4 Name

05 - TimeZone 5 Name

06 - TimeZone 6 Name

07 - TimeZone 7 Name

08 - TimeZone 8 Name

09 - TimeZone 9 Name

10 - TimeZone 10 Name

11 - TimeZone 11 Name

12 - TimeZone 12 Name

13 - TimeZone 13 Name

14 - TimeZone 14 Name

15 - TimeZone 15 Name

16 - TimeZone 16 Name

A single TimeZone can be assigned to each door. Use the [↑] and [↓] keys to highlight door name, then press [OK] to select. Enter 0 - 16 + [OK] to assign the door to a TimeZone – can only be Assigned to one TimeZone (0 = Disabled).

Outputs > Door Properties >

Door Options**MENU 4-2-3**

1	Hold Off If Area Armed	Y
2	Hold Off Auto Unlock	N
3	Reserved	N
4	Report Door Forced	N
5	Alarm On Door Forced	N
6	Report DOTL	N
7	Alarm On DOTL	N
8	Lift Door	N

Outputs > Output Testing >

External Siren Test**MENU 4-9-0****Internal Siren Test****MENU 4-9-1****Strobe Test****MENU 4-9-2****Fire Siren Test****MENU 4-9-3****Comms Programming**

Comms > Commands >

Reserved**MENU 5-0-0****Call/Answer RAS****MENU 5-0-1****Call Forward On/Off****MENU 5-0-2****Check Web Email****MENU 5-0-3****Email System Log****MENU 5-0-4****Start Direct Link****MENU 5-0-5**

Comms > Commands >

Voice Setup**MENU 5-0-6**

This menu allows an installer or master user to record their personal messages that will be reported when using an optional Voice Module (CM101B). The optional voice module is required.

Comms > Commands >

Register Customer**MENU 5-0-8**

This menu is used to enter the customer registration number into the control panel. This unique 11 digit number is generated by the system owner when they create an account on MyAlarm web site.

This is required for panels using the MyAlarm iFob Control App. See the MyAlarm website for more information at www.myalarm.com.au

Comms > Commands >

Register Installer**MENU 5-0-9**

This menu is used to enter the installer registration number into the control panel. This unique 11 digit number is generated by the installer when they create an installer account on the MyAlarm web site.

This number should be entered into all panels installed by the installer allowing them to view all of their panels via the MyAlarm web site.

Comms > Telephone Numbers >

Number Prefix**MENU 5-1-0**

1	Digits								32

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Telephone Numbers >

Destination 1**MENU 5-1-1**

1	Digits								32
Phone 1									

1	Digits								32
Phone 2									

1	Digits								32
Phone 3									

1	Digits								32
Phone 4									

1	Digits								32
Phone 5									

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Telephone Numbers >

Destination 2**MENU 5-1-2**

1	Digits								32
Phone 1									

1	Digits								32
Phone 2									

1	Digits								32
Phone 3									

1	Digits								32
Phone 4									

1	Digits								32
Phone 5									

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Telephone Numbers >

Call Forward On**MENU 5-1-6**

1	Digits								32
	*	6	1	,	*	2	0	#	

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Telephone Numbers >

Call Forward Off**MENU 5-1-7**

1	Digits								32
	#	6	1	#					

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Properties >

Call Attempt Count**MENU 5-2-0**

0	6
---	---

Enter 0 - 10 then press [OK] to program the maximum call retry attempts per destination

Comms > Properties >

Dialler Options**MENU 5-2-1**

1	Dialler Enabled	Y
2	Pulse Dialling	N
3	Dial Tone Detect	Y
4	Busy Tone Detect	N
5	Mirror Report To Web	Y
6	Extend H/S To 1min	N
7	Reserved	N
8	Abort Failed Reports	Y

Comms > Properties >

Phone Line Options**MENU 5-2-2**

1	Display Line Fail	Y
2	Report Line Fail	Y
3	Alarm L/Fail If On	Y
4	Alarm L/Fail If Off	N
5	Reserved	N
6	Digital Line	N
7	Low Voltage	N
8	Display On Line	N



Up to 3 Phone numbers can be entered for CLI Call Line Identification for remote access detection. Press [OK] after each telephone number is entered to save and move to the next number. The control panel is **only required to match part of the CLI telephone number programmed to the number of the incoming call.**

Example

If the programmed CLI telephone number is 0296721777, the control panel would only be required to match part of the telephone number (eg. 96721777) to answer the incoming call.

Comms > Remote Access >									
User RAS PIN								MENU 5-3-8	
0	0	0	0	0	0	0	0	0	0

Use keys [0] - [9] to program User RAS Security PIN + [OK] to save.

Comms > Reporting >	
TX Format Dest 1	MENU 5-4-0
0	1

- | | |
|----------------------|-------------------------|
| 00 - Disabled | 08 - Voice PSTN |
| 01 - Contact ID PSTN | 09 - SIA+ PSTN |
| 02 - SIA PSTN | 10 - PSTN Voice+GSM SMS |
| 03 - Reserved | 11 - GSM 2G Contact ID |
| 04 - Reserved | 12 - GSM SMS |
| 05 - Reserved | 13 - Ethernet |
| 06 - SMS PSTN | 14 - GPRS |
| 07 - Domestic PSTN | 15 - MyAlarm IP |

Use [↑] and [↓] keys or enter 0 – 15 then press [OK] to program the transmission format the control panel will use to report to Destination 1. Only 1 option can be programmed.

Comms > Reporting >	
TX Format Dest 2	MENU 5-4-1
0	1

- | | |
|----------------------|-------------------------|
| 00 - Disabled | 08 - Voice PSTN |
| 01 - Contact ID PSTN | 09 - SIA+ PSTN |
| 02 - SIA PSTN | 10 - PSTN Voice+GSM SMS |
| 03 - Reserved | 11 - GSM 2G Contact ID |
| 04 - Reserved | 12 - GSM SMS |
| 05 - Reserved | 13 - Ethernet |
| 06 - SMS PSTN | 14 - GPRS |
| 07 - Domestic PSTN | 15 - MyAlarm IP |

Use [↑] and [↓] keys or enter 0 – 15 then press [OK] to program the transmission format the control panel will use to report to Destination 2. Only 1 option can be programmed.

Comms > Reporting	
Test Route	MENU 5-4-2
00 - Log Events Only	0 1
01 - Dest 1 + Log	
02 - Dest 2 + Log	
03 - Dest 1 & 2 + Log	
04 - Dest 2 If 1 Fails	

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (** System Wide Parameter **).

Comms > Reporting	
System Route	MENU 5-4-3
00 - Log Events Only	0 1
01 - Dest 1 + Log	
02 - Dest 2 + Log	
03 - Dest 1 & 2 + Log	
04 - Dest 2 If 1 Fails	

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (** System Wide Parameter **).

Comms > Reporting	
Emergency Route	MENU 5-4-4
00 - Log Events Only	0 1
01 - Dest 1 + Log	
02 - Dest 2 + Log	
03 - Dest 1 & 2 + Log	
04 - Dest 2 If 1 Fails	

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (** System Wide Parameter **).

Comms > Reporting >	
Swinger Dialler	MENU 5-4-5
(** System Wide Parameter **)	0 6

Enter 0 – 15 + [OK] to program number of times the dialler can report before lockout. 0 = Unlimited.

Comms > Reporting >	
Burg Report Delay	MENU 5-4-6
(** System Wide Parameter **)	0 0 0
Seconds	

Enter 0 – 255 seconds + [OK] to program the delay time in seconds before reports are sent. 0 = No Delay.

Comms > Reporting >	
Fire Report Delay	MENU 5-4-7
(** System Wide Parameter **)	0 0 0
Seconds	

Enter 0 – 255 seconds + [OK] to program the delay time in seconds before reports are sent. 0 = No Delay.

Comms > IP Remote Access >

IP RAS Options**MENU 5-7-2**

1	IP RAS Allowed	Y
2	RAS Only If Disarmed	N
3	Report IP Session	Y
4	Report IP Lockout	Y
5	UDP Installer RAS	Y
6	UDP User RAS	N
7	Reserved	N
8	Reserved	N

Comms > IP Remote Access >

RAS Lockout Time**MENU 5-7-3**

0	6	0
---	---	---

Seconds

Enter 0 - 255 + [OK] to program the acknowledge wait time in seconds.

Comms > IP Remote Access >

IPRS Address**MENU 5-7-5**

2	0	2	1	2	9	0	8	3	0	5	8
---	---	---	---	---	---	---	---	---	---	---	---

Reserved for factory use. Do not change unless requested to do so.

Comms > IP Remote Access >

IPRS Port**MENU 5-7-6**

0	7	7	0	3
---	---	---	---	---

Reserved for factory use. Do not change unless requested to do so. Must be 5 digits within the range 0 to 65535.

Comms > Comms Test >

Send Test Report**MENU 5-9-0**

Comms > Comms Test >

Test Report Time**MENU 5-9-1****Test Time**

0	2	:	0	0
H	H	:	M	M

Use the [←] and [→] keys to move to the field then [↑] and [↓] to change. Press [OK] to save or [MENU] to exit without saving.



Scroll through hours using the [↑] and [↓] to change from am to pm.

Comms > Comms Test >

Test Report Period**MENU 5-9-2**

(*** System Wide Parameter ***)

0	1
---	---

00 - No Test Report	08 - Reserved
01 - Every Day	09 - Reserved
02 - Every Week	10 - Reserved
03 - Every Month	11 - Reserved
04 - Every 2 Days	12 - Reserved
05 - Every 3 Days	13 - Reserved
06 - Every 4 Days	14 - Every Hour
07 - Every 5 Days	15 - Every 12 Hours

MENU 5-9-2 programs the interval between automatic test reports. Use [↑] and [↓] keys or enter [0] to [15] + [OK] to program.

Comms > Comms Test >

Test Report Options**MENU 5-9-3**

1	Test If No Other Rpt	N
2	Test On Siren Reset	Y
3	Reserved	N
4	Reserved	N
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

Comms > Reporting

Test Route**MENU 5-9-4**

- 00 - Log Events Only
- 01 - Dest 1 + Log
- 02 - Dest 2 + Log
- 03 - Dest 1 & 2 + Log
- 04 - Dest 2 If 1 Fails

0	1
---	---

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (*** System Wide Parameter ***)

Comms > Comms Test >

Dial Number Test**MENU 5-9-5**

Use the option to test the system dialer to your mobile or other phone. Enter the digits to dial and press OK. The system will call the number entered. This function will stop after 30 seconds, or by pressing [OK]. Enter [0] - [9] for telephone digits. Use [↑] and [↓] to toggle special Characters * # and , (Pause).

Device Programming

Devices > Commands >

Device Status	MENU 6-0-0
LAN Secure	MENU 6-0-1
LAN Scan	MENU 6-0-2
LAN Watch	MENU 6-0-3
Keypad Volume	MENU 6-0-7
Keypad Contrast	MENU 6-0-8
Keypad Backlight	MENU 6-0-9

Devices > Keypads & Readers >

Name MENU 6-1-0

K	e	y	p	a	d	1	N	a	m	e									
---	---	---	---	---	---	---	---	---	---	---	--	--	--	--	--	--	--	--	--

Use the [←] and [→] keys to scroll cursor left and right.
 Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Devices > Keypads & Readers >

Area Options MENU 6-1-2

1	All On Arming Allowed	Y
2	Part On Arming Allowed	Y
3	Disarming Allowed	Y
4	Single Button Control	Y
5	All User Areas	N
6	Zero Exit Time	N
7	PIN To Change Area	N
8	Home Area Only	N

Devices > Keypads & Readers >

Home Area MENU 6-1-3

0	1
---	---

00 - No Area

01 - Security System

02 - Area 2 Name

03 - Area 3 Name

04 - Area 4 Name

05 - Area 5 Name

06 - Area 6 Name

07 - Area 7 Name

08 - Area 8 Name

Use [↑] and [↓] keys or enter 0 - 8 then press [OK] to program. This is the area that will be displayed on the keypad by default.



All keypads must have a home area programmed to work correctly.

Devices > Keypads & Readers >

General Options MENU 6-1-4

1	Enable Rear Tamper	N
2	Report Temperature	Y
3	Installer PIN Allowed	Y
4	Show Alarm When Armed	Y
5	Reader Area Control	Y
6	Reader Badging	N
7	Enable Egress Input	N
8	Log Egress Events	N

Devices > Keypads & Readers >

Indicator Options MENU 6-1-5

1	Extinguish	N
2	Greetings	Y
3	Display Temperature	N
4	Display Area Icons	N
5	Trouble Alert Beeps	Y
6	Entry Exit Warning	Y
7	Part Exit Warning	N
8	Chime Tone	Y

Devices > Keypads & Readers >

Emergency Keys MENU 6-1-6

1	Audible Keypad Fire	Y
2	Report Keypad Fire	Y
3	Audible Keypad Medical	Y
4	Report Keypad Medical	Y
5	Audible Keypad Panic	Y
6	Report Keypad Panic	Y
7	Reserved	N
8	Reserved	N

Devices > Keypads & Readers >

Door Assignment MENU 6-1-7

0	0
---	---

00 - No Door Assignment

01 - Door 1 Name

02 - Door 2 Name

03 - Door 3 Name

04 - Door 4 Name

05 - Door 5 Name

06 - Door 6 Name

07 - Door 7 Name

08 - Door 8 Name

09 - Door 9 Name

10 - Door 10 Name

11 - Door 11 Name

12 - Door 12 Name

13 - Door 13 Name

14 - Door 14 Name

15 - Door 15 Name

16 - Door 16 Name

A single door can be assigned to each keypad. Use the [↑] and [↓] keys to highlight door name, then press [OK] to save.

Devices > Keypads & Readers >

Lockout Time

MENU 6-1-8

(*** System Wide Parameter ***)

0 6 0
Seconds

Enter 001 – 255 + [OK] to program the keypad lockout time in seconds. 000 = No Lockout.

Devices > Keypads & Readers >

WiFi Settings

MENU 6-1-9

SSID Scan
SSID
Security
Password
IP Address
Subnet Mask
Default Gateway
MAC Address
IP Options

This menu allows users and installers to scan local on-site Wi-Fi networks using the CP741B keypad including setting the required Wi-Fi security settings and password.

Devices > RF Devices >

Receiver Options

MENU 6-2-0

1	Display RF Rcvr Trouble	Y
2	Alarm RF Rcvr Tamper	Y
3	Report RF Rcvr Tamper	Y
4	Alarm RF Rcvr Jamming	N
5	Report RF Rcvr Jamming	N
6	Alarm Rcvr Comms Fail	Y
7	Report Rcvr Comm Fail	Y
8	Reserved	N

Device > RF Devices >

Supervision Time

MENU 6-2-1

(*** System Wide Parameter ***)

0 2 4
Hours

Enter the supervision time for RF devices in hours (001 – 255 Hours) 000 = No Supervision.

Device > RF Devices >

RF Device Options

MENU 6-2-2

1	Display RF Tamper	Y
2	Report RF Tamper	Y
3	Report RF Low Battery	Y
4	Report Lost RF Devices	Y
5	Open Zone On Lost RF	N
6	Audible Keyfob Panic	Y
7	Report Keyfob Panic	Y
8	Keyfob Func Part On	Y

Devices > RF Devices >

Add RF Keypad

MENU 6-2-3

Delete RF Keypad

MENU 6-2-4

View RF Device ID

MENU 6-2-5

Devices > Serial Device >

Device Type

MENU 6-3-0

- 00 - Disabled
- 01 - Serial Printer
- 02 - Computer

0 0

Use [↑] and [↓] keys or enter 0 – 2 + [OK] to program the type of Serial device connected to the serial port.

Devices > Serial Device >

Baud Rate

MENU 6-3-1

- 00 - No Device Conn
- 01 - 300 Baud
- 02 - 600 Baud
- 03 - 1200 Baud
- 04 - 2400 Baud
- 05 - 9600 Baud
- 06 - 19200 Baud

0 0

Use [↑] and [↓] keys or enter 0 – 2 to program the serial device baud rate, then press [OK] to save.

Devices > Serial Device >

Flow Control

MENU 6-3-2

- 00 - No Handshaking
- 01 - Hardware
- 02 - Xon-Xoff

0 0

Use [↑] and [↓] keys or enter 0 – 2 to program the serial device flow control, then press [OK] to save.

Devices > GSM/GPRS Module >

GSM/GPRS Status**MENU 6-5-0**

This command interrogates the GSM module and displays information about the radio and the SIM installed. The first line is a heading which indicates the GSM module type that is installed. Typical information available includes details on the installed radio, the SIM provider and signal strength of the currently active SIM.

It should be noted that the use of SIM 2 is restricted to reporting protocols that utilise the dual sim where SIM 2 is a backup.

```
GSM/GPRS Module 1 G11
<Scroll Parameters Hers>
Press ▲▼ OK or MENU
```

The following parameters will be displayed one at time on the display.

IMEI

Radio Model

Radio Firmware

Radio S/N

Provider

Signal Strength

Dual Sims Detected

Devices > GSM/GPRS Module >

GSM/GPRS Options**MENU 6-5-1**

1	Auto Forward SMS	N
2	Forward SMS To Mail	N
3	Reserved	N
4	Reserved	N
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

Devices > GSM/GPRS Module >

CLI Trigger Table 1**MENU 6-5-5-0**

	1	Digits								16
Phone 1										
Phone 2										
Phone 3										
Phone 4										
Phone 5										
Phone 6										
Phone 7										
Phone 8										
Phone 9										
Phone 10										

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).



Up to 10 CLI telephone numbers can be entered for Table 1. Press [OK] after each telephone number is entered to save and move to the next telephone number. The control panel is only required to match part of the CLI telephone number programmed to the number of the incoming call.

Do not enter international or domestic prefixes when entering CLI numbers. Eg. enter 0423584578 and not +61423584578

Devices > GSM/GPRS Module >

CLI Trigger Table 2

MENU 6-5-5-1

	1	Digits								16
Phone 1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 2	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 3	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 4	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 5	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 6	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 7	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 8	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 9	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 10	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).



Up to 10 CLI telephone numbers can be entered for Table 2. Press [OK] after each telephone number is entered to save and move to the next telephone number. The control panel is only required to match part of the CLI telephone number programmed to the number of the incoming call.

Do not enter international or domestic prefixes when entering CLI numbers. Eg. enter 0423584578 and not +61423584578

Devices > GSM/GPRS Module >

SMS Control

MENU 6-5-6

	1	Digits								16
Phone 1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 2	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 3	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 4	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 5	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 6	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 7	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 8	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 9	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Phone 10	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).



Up to 10 telephone numbers can be entered to provide SMS control. Press [OK] after each telephone number is entered to save and move to the next telephone number. Do not enter international or domestic prefixes when entering SMS Control numbers. Eg. enter 0423584578 and not +61423584578

Devices > GSM/GPRS Module >

APN Server Name

MENU 6-5-7

	1	Digits								32
APN Server Name	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Devices > GSM/GPRS Module >

APN Username**MENU 6-5-8**

APN 1 Digits 32
 Username

Use the [←] and [→] keys to scroll cursor left and right.
 Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Devices > GSM/GPRS Module >

APN Password**MENU 6-5-9**

APN 1 Digits 32
 Password

Use the [←] and [→] keys to scroll cursor left and right.
 Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Devices > Ethernet Module >

Module IP Address**MENU 6-6-0**

This is the IP address of the module on the customers internal local area network.

Devices > Ethernet Module >

Subnet Mask**MENU 6-6-1**

This can be found by running IPCONFIG on a PC connected to the clients network. Typical Subnet mask is 255.255.255.0.

Devices > Ethernet Module >

Default Gateway**MENU 6-6-2**

This gateway IP address can be found by running IPCONFIG on a PC connected to the clients network.

Devices > Ethernet Module >

Module MAC Address**MENU 6-6-3**

This is the hardware machine address of the module and can be found on the bar-coded sticker on the module.

Devices > Ethernet Module >

Ethernet Options**MENU 6-6-9**

1	Display Faults	Y
2	Report Network Lost	Y
3	Report IP Conflict	Y
4	Report Poll Fail	Y
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Report Module Missing	N



See the ethernet module installation guide for more detailed explanation on installation configuring the ethernet module.

System Programming

System > Commands >

Panel Status**MENU 7-0-0****System Trouble****MENU 7-0-1****History Log****MENU 7-0-2****Domestic Default****MENU 7-0-3****Factory Default****MENU 7-0-4****Template Default****MENU 7-0-5**

Reserved for future use.

TimeZone Array**MENU 7-0-6****Service Mode****MENU 7-0-8**

System > Clock >

Set Date And Time**MENU 7-1-0**

System > Clock >

Summertime On**MENU 7-1-1**

At 2:00am
 Month Week Day

(***) System Wide Parameter (***)

Program the month of the year (Jan – Dec), week of the month (Wk1 to Last) and day of the week (Sun To Sat). Use [←] and [→] keys to scroll cursor left and right and use [↑] and [↓] to toggle options.

System > Clock >

Summertime Off**MENU 7-1-2**

At 2:00am

- - -

Month

- - -

Week

- - -

Day

(***) System Wide Parameter (***)

Program the month of the year (Jan – Dec), week of the month (Wk1 to Last) and day of the week (Sun To Sat). Use [←] and [→] keys to scroll cursor left and right and use [↑] and [↓] to toggle options.

System > Clock >

Locale**MENU 7-1-3**

(***) System Wide Parameter (***)

0 0

00 - Disabled

01 - SYDNEY

02 - MELBOURNE

03 - BRISBANE

04 - ADELAIDE

05 - PERTH

06 - HOBART

MENU 7-1-3 programs the locale in Australia. Use [↑] and [↓] keys or enter [0] to [15] + [OK] to program.

System > Power >

AC Options**MENU 7-3-0**

1	Display AC Fail	Y
2	Report AC Fail	Y
3	Sync Clock To AC	Y
4	Random AC Report 2hr	N
5	AC Fail After 1hr	N
6	Reserved	N
7	Reserved	N
8	Display Clock Trouble	Y

System > Power >

Battery Options**MENU 7-3-1**

1	Display Battery Fail	Y
2	Report Battery Fail	Y
3	Battery Test On Arming	Y
4	OK To Arm Low Battery	Y
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

System > Power >

Fuse Options**MENU 7-3-2**

1	Display COMM+ O/Load	Y
2	Report COMM+ O/Load	Y
3	Display +12v O/Load	Y
4	Report +12v O/Load	Y
5	Display LAN O/Load	Y
6	Report LAN O/Load	Y
7	Reserved	N
8	Reserved	N

System > Siren >

Tone**MENU 7-4-0****Speed****MENU 7-4-1****Volume****MENU 7-4-2**

(***) System Wide Parameter (***)

1 5

Enter 0 – 15 + [OK] to program the speaker beep volume of the siren for RF keyfob and keyswitch input operation (0 = Disabled / 1 = Low – 15 = High).

System > Siren >

Siren Swinger**MENU 7-4-3**

(***) System Wide Parameter (***)

0 3

Enter 0 – 15 + [OK] to program number of times siren can sound before lockout. (0 = Unlimited).

System > TimeZones >

Name**MENU 7-5-0**

T i m e Z o n e 2 N a m e

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

System > TimeZones >

Time MENU 7-5-1

Period 1	Start Time <div> <div>--</div>:<div>--</div>:<div>--</div> HH MM SS </div>	Stop Time <div> <div>--</div>:<div>--</div>:<div>--</div> HH MM SS </div>
Period 2	Start Time <div> <div>--</div>:<div>--</div>:<div>--</div> HH MM SS </div>	Stop Time <div> <div>--</div>:<div>--</div>:<div>--</div> HH MM SS </div>
Period 3	Start Time <div> <div>--</div>:<div>--</div>:<div>--</div> HH MM SS </div>	Stop Time <div> <div>--</div>:<div>--</div>:<div>--</div> HH MM SS </div>
Period 4	Start Time <div> <div>--</div>:<div>--</div>:<div>--</div> HH MM SS </div>	Stop Time <div> <div>--</div>:<div>--</div>:<div>--</div> HH MM SS </div>

Use [←] and [→] keys to scroll cursor left and right. Use keys [0] – [9] to enter time in hours (HH) / minutes (MM) and seconds (SS). Press [OFF] to disable the time and press [OK] to save.

System > TimeZones >

Day MENU 7-5-2

	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Hol
Period 1	N	N	N	N	N	N	N	N
Period 2	N	N	N	N	N	N	N	N
Period 3	N	N	N	N	N	N	N	N
Period 4	N	N	N	N	N	N	N	N

Enter 1 – 8 to toggle days ON/OFF, then press [OK] to save.



To create a timezone for auto arming you must enter the arm time in the stop time field. For example, if you want the system to arm at 5.30pm you would program 17:30:00 in the stop field.

If auto disarming is also required then you would enter the disarm time in the start time field of the same timezone period. For example, if you want the system to disarm at 7.30am you would program 07:30:00 in the start field. See the full installation manual for more details.

System > TimeZones >

TimeZone Options MENU 7-5-3

1	Invert Period Logic	N
2	Master Edit Allowed	N
3	Reserved	N
4	Reserved	N
5	Reserved	N
6	Reserved	Y
7	Reserved	N
8	Reserved	Y

System > Holidays >

Holiday Name MENU 7-6-0

H	o	i	d	a	y	1	N	a	m	e							
---	---	---	---	---	---	---	---	---	---	---	--	--	--	--	--	--	--

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

System > Holidays >

Start Stop Dates MENU 7-6-1

Start 12am	Stop 12am
<div> <div>01</div> <div>Jan</div> </div>	<div> <div>01</div> <div>Jan</div> </div>
DD MM	DD MM

Use the [←] and [→] keys to move to the field then [↑] and [↓] to change. Press [OK] to save or [MENU] to exit without saving.



Press [OFF] to disable the holiday.

System > System Options >

General Options MENU 7-7-0

1	Display LAN Fail	Y
2	Report LAN Fail	Y
3	Alarm On LAN Fail	N
4	Cannot Change Own PIN	N
5	Reserved	N
6	Monitor Default PINs	Y
7	PIN Always Required	N
8	Display Menu Numbers	Y

(*** System Wide Parameter ***)

System > System Options >

Area Options**MENU 7-7-1**

1	Area 1 Common	N
2	First Open Last Close	N
3	Reset Siren All Users	Y
4	Power Up As Down	Y
5	Fault ACK All Areas	Y
6	Delay Trouble Beeps	Y
7	Power Up Disarmed	N
8	Ignore Trouble On Arm	N

(***) System Wide Parameter (***)

System > System Options >

Keypad Idle Screen**MENU 7-7-2**

(***) System Wide Parameter (***)

0 0

- 00 - No Idle Screen 02 - Time
01 - Date And Time 03 - Custom Screen

Use [↑] and [↓] keys or enter 0 - 3, then press [OK] to program the keypad idle screen - Single option only.

System > System Options >

Keypad Hi/Lo Temp**MENU 7-7-3**
 0 0 0 °C
Hi TEMP

 0 0 0 °C
Lo TEMP

(***) System Wide Parameter (***)

Use [↑] and [↓] Keys To Program The High / Low Keypad Monitor Temperature. Max = 50 / Min = 0.

System > System Options >

Installer Options**MENU 7-7-4**

1	Report Installer	N
2	Report Prog Change	Y
3	Restrict Installer PIN	N
4	Reserved	N
5	Auto Exit Install 2hr	Y
6	Auto Exit Service 2hr	Y
7	Multi Tenant Mode	N
8	Allow Defaulting	Y

(***) System Wide Parameter (***)

System > System Options >

Language**MENU 7-7-5**

- 0 - English
1 - Alternate Language

0

Enter digits 0 – 1 to program the language required, then press [OK] to save.

System > System Options >

Site Name**MENU 7-7-7**
 1 Characters 32
M y A l a r m

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

System > System Testing >

Walk Test All Zones**MENU 7-9-0****Battery Test****MENU 7-9-1****Testing The System**

You will need to be in programming mode before accessing the test functions listed below.

Walk Test

Use the walk test command MENU 3-9-0 to test and verify that all zones work correctly.

External Audible Test

Use MENU 4-9-0 to test and verify that all horn speakers operate. This test will sound the horn speaker for two seconds.

Internal Audible Test

Use MENU 4-9-1 to test and verify that all 12 VDC sirens operate. This test will sound the siren for two seconds.

Strobe Test

Use MENU 4-9-2 To test and verify that the strobe operates. This test will turn on the strobe until you manually stop the test.

Fire Audible Test

Use MENU 4-9-3 to test and verify that all 12 VDC sirens operate. This test will sound the siren for two seconds.

Battery Test

Use MENU 7-9-1 to test the back-up battery that is connected to the control panel.

Communication Test

Use MENU 5-9-0 to test the telephone reporting capability of the control panel. You can also activate a communication test by holding down the Test / Mail key on the keypad.

Installation Details

CUSTOMER NAME: _____

PHONE _____

INSTALLED BY: _____

DATE: _____

ACCOUNT N°: _____

PANEL LOCATION: _____

PANEL PHONE N°: _____

CLI ENABLED: _____

N° WIRED ZONES: _____

N° OF USERS: _____

N° RF ZONES: _____

N° OF AREAS: _____

WARRANTY
EXPIRES: _____

COMMON AREA
USED: _____

USER TRAINING
COMPLETED BY: _____

PERSON TRAINED: _____

NOTES:

Specifications

Panel	Solution 6000 (Part Number CC610)	
Voltage Input	16-18V AC 50-60Hz - 24VA External Power Adaptor or 220-240V AC to 18V AC 50-60Hz - 24VA Internal Transformer (Primary Power Source)	
Continuous Power	1 Amp MAX (Combined power drawn from Accessory Power(+12V) LAN Power (Module LAN +) and Output Power (C+) terminals must not exceed 1 amp)	
Alarm Power	4 Amp (Total with Primary and Secondary Power Sources Fitted)	
Stand-by Battery	12 VDC, 7.2AH sealed rechargeable battery - Panasonic LC-P127R2P or equivalent. (Secondary Power Source) Dispose of used batteries according to the instructions.	
Min Operating Voltage	10.2 VDC	
Battery Charger	Pulse by pulse charger. (Note: Charge voltage can't be measured unless battery is fitted.)	
Module Connection (RS485 LAN)	Max total LAN length using multi strand security cable = 300m. Max total LAN length using 2 pair twisted shielded data cable (Belden 8723) = 1200m. See the product installation manual for complete wiring instructions.	
Telephone Connections	RJ-12 Socket or 4-way terminal	
Temperature	0° to 55° C	
Enclosure Fixing Method	CM720B - Small Enclosure Use appropriate fasteners capable of handling a minimum of 6kg to fix the cabinet against a sturdy surface using the mounting holes provided. CM730B - Large Enclosure Use appropriate fasteners capable of handling a minimum of 12kg to fix the cabinet against a sturdy surface using the mounting holes provided.	
Relative Humidity	5 to 85% non-condensing.	
Compatible Keypads	CP700B - Graphic Keypad - White CP701B - Graphic Keypad + Prox - White	CP710B - Graphic Keypad - Black CP711B - Graphic Keypad + Prox - Black
Compatible Accessories	CM704B - 8/16 Zone Expander CM710B - 4 Way Relay Output Module CM720B - 1-Amp LAN Power Supply CM195B - Multi RF Receiver Interface CP150B - External Vandal Resistant Keypad CP151B - Slim Style Vandal Resistant Keypad CM705B - Universal Expander Module CM797B - LAN Isolator Module	SW500B - Solution Link (RAS) Software CM900B - Direct Link Interface MW730B - Large Enclosure CM743B - 2G GSM Interface Module PR111B - External LAN Prox Reader CM728 - Fingerprint Reader CM750B - Ethernet Module CM101B - Voice Module
Enclosure Dimensions:	P/N: MW720B - (W)385, (H)280, (D)90mm P/N: MW730B - (W)385, (H)520, (D)90mm	
PWA Dimensions:	(W) 235, (H) 85 (H), (D) 40mm	
Warranty:	3 years from date of manufacture (return to base)	

The following parts are supplied with the panel

(Australian models only - content may differ in export models)

Panel Assembly Includes	1 x MW720B Metal Enclosure With Tamper 1 x Panel PWA 1 x User Manual	1 x Installer Reference Guide 1 x Resistor Pack
Resistor Pack Includes	1 x Red Battery Lead 1 x Black Battery Lead 1 x 2-Way Shunt With Handle 2 x Phillips Pan Head Zinc Plated Screws 1 x Telephone Cable RJ12 6P/4C 1 x Pack PCB Mounting Clips (5 pc/pack)	10 x 3K3 – 0.25W +/- 1% Metal Film Resistors 10 x 6K8 – 0.25W +/- 1% Metal Film Resistors 1 x 3-Way Removable Terminal Block 1 x Panel Tamper Switch + Tamper Lead 1 x Tamper Switch Bracket 1 x Product Identification Label
Available Separately	Solution 6000 Installation Manual Part Number BLCC610I Solution Link (RAS) Software Part Number: SW500B	

This page left intentionally blank

This page left intentionally blank

Bosch Security Systems
Level 2, 21 Solent Circuit
Baulkham Hills, NSW 2153
Australia
Phone: 1300 026 724
www.boschsecurity.com.au

© 2016 Bosch Security Systems
BLCC610R
Issue FTR1.4

BOSCH