

> User's manual



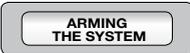
Get Videofied,
visit us at www.videofied.com.au



Setting your system to the monitoring mode



1. From your keyboard

- When the display is turned off, press any key on the keyboard
- Enter your access code (4 to 6 digits)
- Press  to confirm your code
- The keyboard display will show the following message 
- Start of the time delay sequence to allow exit the keyboard emits short sound signals. After the time delay expires, your system enters the monitoring mode
- The red led on the keyboard flashes every 2 seconds to indicate that the system is enabled in the monitoring mode



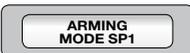
2. From your remote control

- Press  on your remote control
- The buzzer of your remote control will send two short audio signals confirming remote enabling of the system
- Start of the time delay sequence to enable exit; the keyboard emits short sound signals
- The red led on the keyboard flashes to signal that the system is enabled in the monitoring mode

Setting your system to the special monitoring modes 1 or 2



1. From your keyboard

- When the display is turned off, press any key on the keyboard
- Press 
- The keyboard display will show the following message 
- Enter your access code (4 to 6 digits)
- Press  to confirm your code
- The keyboard display will show the following message 
- Start of the time delay sequence to enable exit; the keyboard emits short sound signals. After the delay time expires, the short signals stop and your system enters the special monitoring mode 1
- The red led on the keyboard flashes every 2 seconds to indicate that the special monitoring mode 1 is enabled

To enable the system in the special monitoring mode 2, perform the same procedure as described in point 1, but press 



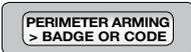
2. From your remote control

- Press  on your remote control
- The buzzer of your remote control will send two short audio signals confirming remote enabling on of the system
- Start of the time delay sequence to enable exit; the keyboard emits short sound signals

Setting your system to the external monitoring mode



1. From your keyboard

- When the display is turned off, press any key on the keyboard
- Press 
- The display will show the following message 
- Enter your access code (4 to 6 digits)
- Press  to confirm your code
- The display will show the following message 
- Start of the time delay sequence to enable exit; the keyboard emits short sound signals
- After the delay time expires, the short signals stop and your system enters the external monitoring mode
- The red led on the keyboard flashes every 2 seconds to indicate that the system is enabled in the external monitoring mode

Disabling the monitoring mode

You can disable the monitoring mode of your system at any time



1. From your keyboard

- When the display is turned off, press any key on the keyboard
The display will show the following message 
- Enter your access code (4 to 6 digits)
- Press  to confirm your code
- The display will show the following message 
- The monitoring mode of your system has been disabled and the red led on the keyboard stops flashing



2. From your remote control

- Press on your remote control
- The buzzer of your remote control will send two short audio signals confirming remote disabling of the system

Disabling monitoring with display of the alarm memory

- If an alarm has occurred, during the disabling of the monitoring mode the keyboard display will inform you of the events that triggered the alarm
- Press to confirm display of the event history
- Your keyboard will display the event list
- The displayed message about the event will disappear automatically after 5 seconds

Enabling the alarm

1. From your keyboard

- Press the red alert button on your keyboard
- The red led on the keyboard lights up and stays on
- The alarm siren is turned on for 90 seconds

You can turn off the siren at any time by entering your confidential code and pressing or by pressing on your remote control

Programming your system

Use your keyboard to personalize your security system at any time

1. Access to the programming mode

- Press or on your keyboard

2. Add a new access code

- From the stand by screen, press on your keyboard until the appearance of the following screen and press
- Then enter an already existing user code and press
- To record a new access code, press
- Enter a new code (from 4 to 6 figures), press
- Enter the same new code (from 4 to 6 figures) to confirm and press
- Enter now the name associated with this code: for example Jean

3. Delete an access code

- From the stand by screen, press on your keyboard until the appearance of the following screen and press
- Then enter an already existing user code and press
- Press then press
- Choose by means of the code to be erased and press
- Confirm the disappearance by press

4. Exit the programming

Press 5 seconds to return to the main screen



Your Dealer

