

# ENGLISH

## Setting your system



### 1. From your keypad

- ➔ Press the **clr** key on the keypad to wake it up
- ➔ Enter your access code and press **OK** or **lock** to confirm
- ➔ The keypad display will then show the following message **SYSTEM ARMING**
- ➔ The time delay starts, and short beeping sounds are emitted from the keypad and/or remote internal sirens. At the end of the time delay the system is set. The red light on the keypad flashes every two seconds.



### 2. From your remote control

- ➔ Press the **ON** button and release after the first beep
- ➔ The remote control will then beep twice in confirmation
- ➔ The time delay starts, and short beeping sounds are emitted from the keypad and/or remote internal sirens. At the end of the time delay the system is set. The red light on the keypad flashes every two seconds.

## Part setting your system



### 1. From your keypad

 
- ➔ Press the **clr** button on the keypad then press the **home** button
- ➔ Wait for the keypad display **ALARM MODE SP1 > BADGE OR CODE**
- ➔ Enter your access code and press **OK** or **lock** to confirm
- ➔ The keypad display will then show the following message **ARMING SP1**
- ➔ The time delay starts, and short beeping sounds are emitted from the keypad and/or remote internal sirens. At the end of the time delay the system enters part set mode 1. The red light on the keypad flashes every two seconds.



### 2. From your remote control

- ➔ Briefly press the **1** or **2** button and release after the first beep
- ➔ The remote control will then beep twice in confirmation
- ➔ The time delay starts, and short beeping sounds are emitted from the keypad and/or remote internal sirens. At the end of the time delay the system enters part set mode 1 or 2 depending on which button was pressed. The red light on the keypad flashes every two seconds.

## Unsetting the system

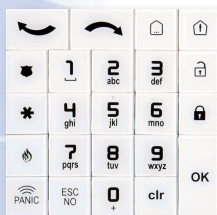

### 1. From your keypad

- ➔ Press the **clr** button on the keypad
- ➔ Enter your access code and press **OK** or **OK** to confirm
- ➔ The keypad display will then show the following message

MON 21/10 18:10  
DISARMED LVL:3



### 2. From your remote control

- ➔ Press the **OFF** button and release after the first beep sounds
- ➔ The remote control will beep twice in confirmation

## Set off an alarm



### 1. From the keypad

- ➔ Press the **clr** button on the keypad
- ➔ Press **PANIC** for 2 seconds.  
After 3 short beeps, the control unit will emit a sharp beep
- ➔ Press **🔒** or **\*** or **🔥**

 


### 2. From your remote control

- ➔ Press for more than 2 seconds on one of the bottom buttons.  
There are two alarms possible with the remote control:  
silent alarm **1**, alarm with siren **2**


You can turn off the siren at any time  
by entering your user code followed by **OK**  
or by pressing the **OFF** button on your remote control

## Unsetting after an alarm (alarm memo)

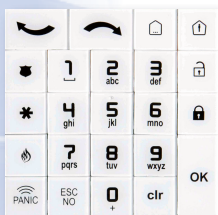

- ➔ If an alarm has activated, during the unsetting of your system the screen of the keypad provides you with details of what caused the alarm INTRUSION DETECTED
- ➔ Press the OK button to check the alarm memo and the keypad then gives details of the cause of the alarm AREA N°  
DETECTOR NAME (displayed for 5 seconds)
- ➔ Then the keypad goes into standby mode after 40 seconds

## Programming your system

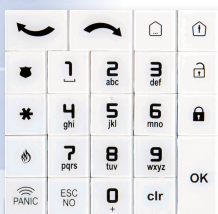 

### From your keypad

#### 1. Accessing programming mode

- ➔ To access the various menus press the arrow keys ← or → on the keypad

*You need to go to level 3 to access management of the access codes*

- ➔ From the main menu: ← ACCESS LEVEL  
1
- ➔ Press OK ACCESS LEVEL  
LEVEL: 1
- ➔ Change the level by pressing twice on → ACCESS LEVEL  
LEVEL: 3
- ➔ Confirm by pressing OK BADGE OR CODE?
- ➔ Enter the level 3 code then press OK to confirm ACCESS LEVEL  
LEVEL: 3
- ➔ Return to the main menu by pressing once on ←

#### 2. Add a new access code

- ➔ Press → several times until the following screen menu appears BADGES/  
ACCESS CODES
- ➔ Confirm with OK button
- ➔ Enter an existing level 3 code (master code) and confirm with OK
- ➔ To record a new code press OK once again
- ➔ Enter the code (4 to 6 digits) followed by OK, confirm this code followed by OK
- ➔ Enter the name associated with this code (SMS type data entry),  
for example: HELENA, confirm by OK










**NOTE:** Creation of a code generates 2 sub-codes:

Code + 1: code which allows shutdown of the system while generating a silent alarm

Code + 2: code which allows shutdown of the system while generating an audible alarm

**Example:** Code 1999 will give respectively  
2000 (silent alarm) and 2001 (audible alarm)

### **3. Delete an access code**

- ➔ Press several times on  until the  menu screen appears
- ➔ Confirm with the  key
- ➔ Enter an existing level 3 code (master code) and confirm with 
- ➔ Then press button  then 
- ➔ Using the  button select the code to delete then 
- ➔ Confirm deletion by pressing  again

### **4. Exit from programming mode**

- ➔ Press the  button for 5 seconds to go back to the main screen